

















IF IT'S WORTH BUILDING, IT'S WORTH TESTING

Contents



This wishlist was generated on 26/08/2016, and contains the following Products:

36-3320/01

ADR Touch 3000 BS EN Compression Machine with Digital Readout and Self Centring Platens.

37-5110

EN 12390-3/4 Distance Piece - 20 mm Depth

37-5120

EN 12390-3/4 Distance Piece - 50 mm Depth

37-5170

EN 12390-3/4 Distance Piece - 80 mm Depth

37-5180

EN 12390-3/4 Distance Piece - 100 mm Depth

34-0192

Slump Test Set BS & ASTM. C/W Slump Cone Base Plate Steel Rule Tamping Rod & Funnel.

34-3265

Air Entrainment Meter B Type Complete with Carrying Case. Supplied with Aluminium Tamping Bar.

34-0130

Tamping Rod 16mm Dia X 600mm Long Hemispherical At Both Ends.

34-2910

Compacting Bar 25mm Sq X 380mm

34-6431/01

Vibrating Poker 25mm Dia Tip 290mm Long. 220-240V 50/60Hz 1Ph.

34-6134

6" Retaining Caps

70-0250/01

Gsp210/250 Core Trimmer & Cut Off Machine Supplied with Coolant Pump Unit

38-2010

Vicat Frame

38-2620

www.ele.com # +44 (0)1525 249 200 # +1 (800) 323 1242 Page 2 of 26

Contents



ASTM Initial Set Needle

39-0035/01

Automatic/Manual 5 litre nominal capacity Mortar Mixer

39-0060

Bowl Cover

39-0065

Scraper

39-1100

Three-gang Mould

39-1150/01

Jolting Table 220 - 240 V 50 Hz



ADR Touch 3000 BS EN Compression Machine with Digital Readout and Self Centring Platens.

Code: 36-3320/01

Product Group: BS EN Compression Machines

The ADR Touch range of 2000 kN and 3000 kN capacity compression machines has been designed to meet the need for reliable and consistent testing. The load frame is a welded steel fabrication carrying the ball-seated upper platen. Positively located on the loading ram, which is protected from debris by a flexible cover, the lower platen is marked for the centring of cube and cylinder specimens. Self-centring lower platens for cube location are supplied as standard on EN machines and are available as an optional extra on the standard machine. The two machines for cube testing to EN standards are assembled and aligned using a special compression

assembled and aligned using a special compression frame stability tester.

The dimensions of the frame allow the testing of concrete cylinders up to 320 mm long x 160 mm diameter, 150 and 100 mm square cubes, and on EN/BS machines, 200 mm square cubes. Kerbs and flagstones may also be tested on ADR machines as well as 150 mm and 100 mm square section beams to ASTM C78 using the optional 100 kN flexural frames which are connected to the power pack.

Standards

EN 12350-6, NF P18-411

Further Information

Not available for sale in the USA

ADR Touch BS EN 2000 and 3000 kN compression machines are supplied complete with self-centring lower platen and safety gates fitted with interlock switches ready for testing 300×150 mm diameter cylinders.

Whilst delivering all the features and reputation of the established ADR Series with its extensive design history, the new and improved user interface provides a high quality platform for testing that enhances the performance of ELE's compression machines.

New, sophisticated electronics further the benefits of simplified operation, whilst delivering the highest levels of accuracy in testing concrete and cement/mortar samples, satisfying the needs of Quality Control Managers, Lab Managers and Technicians.

ACCURACY & SAVINGS

The new ADR Touch Series, with 145mm (5.7") high resolution QVGA touch screen interface and intuitive menu-driven operation, reduces the time taken to set up the machine and perform tests, reducing the time to train staff by up to 25%.

- Up to 6 sample types can be set as favorites, enabling one-touch set up for repeat testing.
- Full, QWERTY touch pad for input of test data.

Most testing errors produce lower strength results. Noncompliant loading rates can generate errors in measured strength. The user interface includes real-time display of load vs. time, further ensuring accurate and consistent test results and providing "goodness of test" data to improve traceability in your QC operations.

TRACEABILITY & DATA QUALITY

The ADR range now provides improved data quality and traceability in due diligence cases - it is now possible to demonstrate traceability all the way from the machine/user to the accreditation body, increasing your reputation and peace of mind - all test results now come complete with the machine serial number attached.

- Enhanced USB data communications between PC and machine eliminating the need for download software.
- Two gigabytes of storage memory.
- Full customization of sample sizes stress calculations are automatically recalculated.

USER SAFETY

With full safety gates as standard, total systems diagnostics, ram run-out switches and overload warnings ensure the

safety of your employees and the reliability of your machine.

Specification

Testing Standards BS EN 12390-4, BS EN

12390-3, BS EN 12390-4, BS EN 12390-5, EN 12504-1, EN 1354, EN 1521, EN 3161, EN 1338, EN 772-6, EN 13286-41, BS 3892-3, BS 187, BS 6717, BS EN ISO 7500-1, ASTM E4

Capacity 3000 kN
Cubes (Concrete) Up to 200 mm
Cylinders (Concrete) Up to 160 x 320 mm

Blocks Via optional Platen Handling

System

Flexural Testing Via Flexural Frame

TFV and ACV Yes

Voltage Supply 220-240V 50/60 Hz 1Ph.

Frame Class (Stability)

Frame Type

Max vert. Clearance

Max hor. Clearance

310 mm

Platen Sizes Lower 220mm sq, Upper 300mm dia

Opper Southin

Max Ram Travel 50 mm

Spares/Consumables





Pressure transducer, 0-700bar, 0.05 to 10v DC Output

Code: 6014A0062



EN 12390-3/4 Distance Piece - 20 mm Depth

Code: 37-5110

Product Group: Distance Pieces

Further Information



EN 12390-3/4 Distance Piece - 50 mm Depth

Code: 37-5120

Product Group: Distance Pieces

Further Information



EN 12390-3/4 Distance Piece - 80 mm Depth

Code: 37-5170

Product Group: Distance Pieces

Further Information



EN 12390-3/4 Distance Piece - 100 mm Depth

Code: 37-5180

Product Group: Distance Pieces

Further Information



Slump Test Set BS & ASTM. C/W Slump Cone Base Plate Steel Rule Tamping Rod & Funnel.

Code: 34-0192

Product Group: Slump Test

BS and ASTM comprising of slump cone, base plate, steel rule, tamping rod and funnel.

Further Information

NOT AVAILABLE FOR SALE IN THE USA

www.ele.com # +44 (0)1525 249 200 # +1 (800) 323 1242 Page 11 of 26



Air Entrainment Meter B Type Complete with Carrying Case. Supplied with Aluminium Tamping Bar.

Code: 34-3265

Product Group: Precision Air Entrainment Meter, Precision Air Entrainment Meter

- 7 litre capacity
- Shock-proof pressure gauge mounting
- Lightweight aluminum construction
- Heavy-duty plastic carrying case for easy transport to site

The proper control of entrained air in concrete is recognized as one of the most important functions in modern concrete manufacture. For the concrete engineer, the ELE Precision Air Entrainment Meter offers an instrument for the testing and designing of concrete mixes.

The instrument is designed so that the operating parts form an integral unit. The container is rigid, thus providing an accurate device for the performance of unit weight testing. For convenience, the tare weight in grams is stamped on the bottom. When used with the supplied nomograph, the air meter provides quick and easy particle density and percent of free moisture in aggregate determinations.

Standards

ASTM C231, AASHTO T152

Specification

Dimensions 248 x 345 mm (diameter x

height)

Capacity 7 litres

Readings Up to 22% entrained air Accuracy ± 0.25% full scale Aggregate size 50 mm maximum

Container With tare weight stamped on

bottom; 2-piece clamping

device

for positive seal

Pressure gauge In shock-proof mounting

Weight 8 kg

Capacity 1/4 cu. Ft. (0.007 m³)
Readings Up to 22% entrained air

Accuracy 1/4% full scale

Aggregate Size 2" (50.8 mm) maximum

Container With tare weight stamped on

www.ele.com +44 (0)1525 249 200

= +1 (800) 323 1242



bottom; 2-piece clamping device for positive seal.

Water 4 oz required

Initial Pressure Approx. 10 strokes needed
Pressure Gauge In shock-proof mounting
Tamping Rod Aluminium; 24" (610 mm) long
Dimensions 9-3/4" diam. X 13-1/4" h. (248

x 337 mm)

Weight Net 15 lbs (6.8 kg)

Spares/Consumables



Concrete Air Indicator

Code: 38-3280/10



Gauge Kit

Code: 34-3265/12



Pump Assembly

Code: 34-3265/10

www.ele.com +44 (0)1525 249 200

= +1 (800) 323 1242

Page 13 of 26



Tamping Rod 16mm Dia X 600mm Long Hemispherical At Both Ends.

Code: 34-0130

Product Group: Precision Air Entrainment Meter, Slump Test, Accessories for Concrete Moulds

Steel, 600 mm long x 16 mm dia, hemispherical at both ends

Further Information

NOT AVAILABLE FOR SALE IN THE USA

www.ele.com # +44 (0)1525 249 200 # +1 (800) 323 1242 Page 14 of 26



Compacting Bar 25mm Sq X 380mm

Code: 34-2910

Product Group: Accessories for Concrete Moulds,

Precision Air Entrainment Meter

Steel, $380 \times 25 \text{ mm}$ (length x square) tamping area,

EN/BS.



Vibrating Poker 25mm Dia Tip 290mm Long. 220-240V 50/60Hz 1Ph.

Code: 34-6431/01

Product Group: Vibrating Poker

- High amplitude and speed
- Flexible shaft for long life

Used as an internal means of vibratory compaction. The poker is inserted into the concrete which is then compacted by the high frequency vibration action. For use in either laboratory or site environments, the diameter of the vibrating tip must not exceed 25% of the smallest dimension of the specimen.

Further Information

NOT AVAILABLE FOR SALE IN THE USA

For 220 - 240 V AC, 50 - 60 Hz, 1 ph

Specification

Tip Dimensions 22 mm diamenter x 250 mm

long

Shaft dimensions 2.0 m long

Speed 12,000 vibrations/min.
Overall Dimensions 200 x 300 x 350 mm

Weight 7 kg

www.ele.com +44 (0)1525 249 200

= +1 (800) 323 1242





6" Retaining Caps

Code: 34-6134

Product Group: Concrete Capping Pads and

Retainers

Set of 2.

Standards

ASTM C1231, AASHTO T22

Further Information

Capping Pads with Retainers can only be used on compression testers with a vertical daylight opening of 14-1/2" (368 mm) between platens

Specification

Capping Pads. Tough elastometric material; 60

durometer pads may be used on any strength concrete; however, the longevity is lowered when used on cylinders in excess of 5,500 psi. 70 durometer pads should be used only on cylinders where concrete is 4,500 psi or

higher.

Retainers.

Weights.

Machined, high alloy steel Pads: Net 8 oz. (227 g) ea.

Retainers:

4" (102 mm) Net 4 lbs. (1.8 kg)

ea.

6" (152 mm) Net 8 lbs. (3.6 kg)

ea.



Gsp210/250 Core Trimmer & Cut Off Machine Supplied with Coolant Pump Unit

Code: 70-0250/01

Product Group: Sample Preparation

This unit, designed for use in Rock Mechanics, can also be used in mineralogy, ceramics and refractory sample preparation. Cores in excess of 140 mm length and cubes up to 100 mm square can also be prepared.

Further Information

Supplied complete with coolant recirculation pump/tank unit and 1 each diamond set cutting disc and

double faced cup wheel. For 220 - 240 V AC, 50 Hz, 1 ph.

Specification

Dimensions (l x w x h) 406 x 915 x 760 mm Two vices supplied 1- Regular and Irregular

samples up to 70 x 125 mm
1- V-vice cores up to 57 mm
diameter x 140 mm long

Blade capacity 200 mm
Rated Power 750 W
Weight 118 kg

www.ele.com +44 (0)1525 249 200

= +1 (800) 323 1242



Vicat Frame

Code: 38-2010

Product Group: Vicat Method

Complete with consistency plunger, 10 mm diameter. Requires one initial or final set needle to make up test weight to 300g.

Standards

EN 196-3, EN 13454-2, ASTM C187, ASTM C191

Further Information

NOT AVAILABLE FOR SALE IN THE USA

Spares/Consumables

Consistency Plunger

Code: 38-2010/10



ASTM Initial Set Needle

Code: 38-2620

Product Group: Vicat Apparatus, Vicat Method

1 mm diameter.



Standards

ASTM C187, ASTM C191

Spares/Consumables

Consistency Plunger

Code: 38-2010/10





Automatic/Manual 5 litre nominal capacity Mortar Mixer

Code: 39-0035/01

Product Group: Automatic/Manual 5 Litre Nominal Capacity Mortar Mixer

- New Microprocessor control
- New mix program selector
- Complies with latest EN Standards update
- Choice of automatic mixing cycles
- Sand and water dispenser supplied as standard

This mixer is designed to mix mortars and cement pastes to the requirements of the above Standards. The mixing paddle has a planetary motion and is driven by a motor with a microprocessor based speed and program controller. The mixer can be operated either in an automatic or manual mode. When the mixer is used in the manual mode, the two mixing speeds can be changed by means of a rocker switch, without switching off the motor. In the automatic mode any one of the preset mixing programs may be selected.

Standards

EN 196-1, EN 196-3, EN 413-2, EN 459-2, EN 1744-1, EN 13279-2, EN 1015-2, EN 13395-1, EN 13454-2, ISO 679, BS 3892-1, BS 3892-3, BS 6463-103, BS 4551-1

Further Information

NOT AVAILABLE FOR SALE IN THE USA

Complete with bowl and paddle, sand and Water dispensers. For 220 - 240 V AC, 50 - 60 Hz, 1 ph.

Specification

Dimensions (l x w x h) 530 x 350 x 580 mm Speeds (rpm) Low, High Paddle: 140 ± 5 , 285 ± 10 Mixing Head: 62 ± 5 , 125 ± 10

Rated Power 180 W

Bowl Capacity 5 litres approx.

Weight 54 kg

Spares/Consumables

www.ele.com # +44 (0)1525 249 200 # +1 (800) 323 1242 Page 21 of 26





Bowl

Code: 39-0031/11



Paddle

Code: 39-0031/10



Bowl Cover

Code: 39-0060

Product Group: Automatic/Manual 5 Litre Nominal


Capacity Mortar Mixer

Standards

EN 196-1, EN 196-3, EN 413-2, EN 459-2, EN 1744-1, EN 13279-2, EN 1015-2, EN 13395-1, EN 13454-2, ISO 679, BS 3892-1, BS 3892-3, BS 6463-103, BS 4551-1

Further Information

NOT AVAILABLE FOR SALE IN THE USA

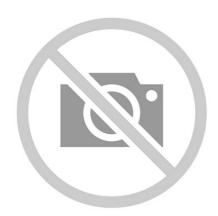

Scraper

Code: 39-0065

Product Group: Automatic/Manual 5 Litre Nominal

Capacity Mortar Mixer


Plastic 200mm long. Pack of 5.

Standards

EN 196-1, EN 196-3, EN 413-2, EN 459-2, EN 1744-1, EN 13279-2, EN 1015-2, EN 13395-1, EN 13454-2, ISO 679, BS 3892-1, BS 3892-3, BS 6463-103, BS 4551-1

Further Information

NOT AVAILABLE FOR SALE IN THE USA

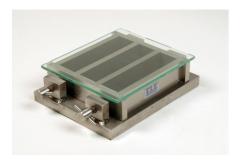

Three-gang Mould

Code: 39-1100

Product Group: Moulding of Prisms

For $40.1 \times 40 \times 160$ mm mortar prisms. This mould is manufactured to a very high specification. Supplied with glass plate.

Further Information

NOT AVAILABLE FOR SALE IN THE USA

Spares/Consumables



Glass Plate

Code: 39-1100/10



Mortar Sand

Code: 39-1170

www.ele.com +44 (0)1525 249 200

= +1 (800) 323 1242



Jolting Table 220 - 240 V 50 Hz

Code: 39-1150/01

Product Group: Jolting Table Supplied without moulds.

Standards

EN 196-1, EN 413-2, EN 459-2, EN 1744-1, EN 1015-10, EN 1015-11, EN 13454-2, ISO 679, BS 3892-1, BS 4551-1

Further Information

NOT AVAILABLE FOR SALE IN THE USA

Spares/Consumables



Mortar Sand

Code: 39-1170



Scraper

Code: 39-1130

www.ele.com +44 (0)1525 249 200

= +1 (800) 323 1242