



IF IT'S WORTH BUILDING, IT'S WORTH TESTING

This wishlist was generated on 14/09/2016, and contains the following Products:

---

78-0135/01

**425 Litre Drying Oven**

---

450-013

**Water Level Indicator with Audio and Light Indicator 200 m**

---

26-2114/01

**Digital Direct/Residual Shear Apparatus Complete with Lever Loading Assembly. 220-240V 50/60Hz 1Ph.**

---

27-1561

**S-Type Load Cell 5 kN.for Use with Direct/ Residual Shear Machine. Fitted with 5 Pin Din Plug.**

---

26-2132

**Set of Weights 50 kg Slotted.**

---

26-2185

**Specimen Cutter 60mm Sq.**

---

27-1793

**DS7.2 Direct and Residual Shear Strength Program for Windows 7, 32/64 bit**

---

27-1697

**Horizontal Displacement Transducer Assembly 15mm Travel 5 Pin Din Plug Mounting Pillar**

---

27-1689

**Vertical Displacement Transducer Assembly 15mm Travel with 5 Pin Din Plug Bracket for Shear Box**

---

26-2181

**Shear Box Assembly 60mm Sq.**

---

29-3729

**Pocket Penetrometer.**

---

35-2510

**Calibrated Crack Monitor**

---

78-5447/01

**Electronic Balance - 2 500 g x 0.01 g**

---

---

81-2979

**Moisture Content Tin**

---

81-4020

**Sample Tray - 306 x 306 x 38 mm**

---

81-4030

**Sample Tray - 406 x 406 x 50 mm**

---

81-4080

**Sample Tray - 610 x 610 x 63 mm**

---

81-4160

**Sample Tray - 910 x 910 x 76 mm**

---

81-4230

**Sample Tray - 1200 x 1160 x 50 mm**

---

45-9305/01

**Vacuum Pycnometer Apparatus**

---

45-3815/01

**Rotatest 3000**

---

78-0760

**Clamped Boss Load Ring - 28.0 kN**

---

24-9183

**Cbr Penetration Piston (Adjustable).**

---

24-9186

**Penetration Dial Gauge BS**

---

24-9290

**45kN (10000Lb) Capacity Mechanical Jack.**

---

24-9300

**Ball Seating for EL 24-9290 45 kN Jack**

---

24-9308

**Set of Extension Rods Complete**

---

24-9312

## Datum Bar Assembly.

---

24-9320

**10Lb (4.5Kg) Annular Surcharge Weight.**

---

24-9322

**10Lb (4.5Kg) Slotted Surcharge Weight.**

---

24-9298

**Land Rover Bracket to Attach EL29-200 Jack. for Land Rovers Models 90 & 110 From 1983 Onwards.**

---

23-4250

**Cbr/Core Cutter Extruder Frame and Hydraulic Jack Extrudes 150mm/6 Inch Diameter Specimens.**

---

23-4300

**Adaptor Plate for 23-4250 to Extrude 100mm/4 Inch Diameter and Marshall Specimens.**

---

79-0020

**200 mm Diameter Receiver**

---

79-0070

**200mm Dia BS Sieve 63 Mic Stainless Steel Mesh.**

---

79-0080

**200mm Dia BS Sieve 75 Mic Stainless Steel Mesh.**

---

79-0120

**200mm Dia BS Sieve 150 Mic Stainless Steel Mesh.**

---

79-0140

**200mm Dia BS Sieve 212Mic Stainless Steel Mesh.**

---

79-0160

**200mm Dia BS Sieve 300Mic Stainless Steel Mesh.**

---

79-0180

**200mm Dia BS Sieve 425Mic Stainless Steel Mesh.**

---

79-0200

**200mm Dia BS Sieve 600Mic Stainless Steel Mesh.**

---

# Contents

www.ele.com  
+44 (0) 01525 249 200



79-0240

**200mm Dia BS Sieve 1.18mm Stainless Steel Mesh.**

---

79-0270

**200mm Dia BS Sieve 2.00mm Stainless Steel Mesh.**

---

79-0010

**200 mm Diameter Lid**

---

79-2020

**300mm Dia Receiver.**

---

79-2280

**300mm Dia BS Sieve 2.36mm Stainless Steel Mesh.**

---

79-2300

**300mm Dia BS Sieve 3.35mm Stainless Steel Mesh.**

---

79-2515

**300mm Dia BS Sieve 5.00mm Perforated Plate.**

---

79-2525

**300mm Dia BS Sieve 6.30mm Perforated Plate.**

---

79-2555

**300mm Dia BS Sieve 10.0mm Perforated Plate.**

---

79-2575

**300mm Dia BS Sieve 14.0mm Perforated Plate.**

---

79-2595

**300mm Dia BS Sieve 20.0mm Perforated Plate.**

---

79-2615

**300mm Dia BS Sieve 28.0mm Perforated Plate.**

---

79-2640

**300mm Dia BS Sieve 37.5mm Perforated Plate.**

---

79-2655

**300mm Dia BS Sieve 50.0mm Perforated Plate.**

---

79-2670

**300mm Dia BS Sieve 63.0mm Perforated Plate.**

---

---

79-2680

**300mm Dia BS Sieve 75.0mm Perforated Plate.**

---

79-2010

**300mm Dia Lid.**

---

24-0434

**Liquid Limit Device ASTM/ Aashto Hand-Operated W/ Revolution Counter.  
Supplied Less Grooving Tool.**

---

24-0461

**Casagrande Grooving Tool Aashto**

---

81-0518

**Timer Clock**

---

81-0310

**Trowel - Gardeners type**

---

24-9063

**ASTM Compaction Rammer 2.5Kg.**

---

24-9010

**Straight Edge 300mm.**

---

24-9060

**Proctor Mould**

---

82-8020/01

**Distilled Water Still**

---

23-4090

**38mm Hand Operated Hydraulic Sample Extruder with Trimming Knife 38mm  
Split Former & Cutting Tool.**

---

23-5800

**Hand Operated Soil Lathe for 38mm Dia Specimens Up to 100mm Long.**

---

81-0710

**Trimming Knife**

---

24-4145

**Sodium Hexametaphosphate 500G.**

---

---

24-4620

**Soil Hydrometer BS EN DD ENV graduated 0.995 to 1.030 g/ml**

---

24-4700

**Hydrometer Sedimentation Cylinder**

---

80-0200/01

**ELE Sieve Shaker**

---

79-7200

**Sieve Brush Brass and Nylon**

---

29-3720

**Dynamic Cone Penetrometer 8Kg Hammer (Trl Design).**

---

29-3720/10

**Spare Cone for Dynamic Cone Penetrometer.**

---

29-4100

**150mm Sand Pouring Cylinder.**

---

29-4120

**150mm Calibrating Container 150mm Id X Deep with 250mm Dia Rim.**

---

29-4140

**Metal Tray 300mm Sq X 40mm Deep with A 150mm Dia Hole.**

---

23-3505

**Mortar and Pestle Porcelain.**

---

45-6600/01

**AutoComp 100-A**

---

45-6310

**Compaction Mould**

---

45-6462

**Paper Discs**

---

45-6463

**Steel Block**

---

25-3518/01

## Digital Tritest 50 Load Frame

---

25-4117

**70mm Triaxial Cell 1700Kpa with 5 Pressure/ Drainage Ports. Supplied with Two Valves.**

---

25-4176

**70mm Base Adaptor for 70mm Cells.**

---

25-6430

**Pressure Pad 70mm Diameter.**

---

25-6441

**Rubber Membrane 70mm/2.8 Inch Diameter. Pack of 10.**

---

25-6461

**Membrane Sealing Ring 70mm Diameter Pack of 10.**

---

25-6470

**Membrane Placing Tool 70mm/2.8 Inch Diameter.**

---

25-6480

**Suction Membrane Device 70mm Diameter.**

---

25-6500

**Two-Way Split Former 70mm Diameter.**

---

26-1746

**Bladder-Type Air/Water Pressure Assembly. 1000 Kpa Maximum Working Pressure.**

---

26-1760

**Pneumatic Pressure Reducing Panel. Provides Two Independent Pressure Outlets 1000 kPa Max.**

---

26-1769

**Nylon Tubing 30 Metre Length.**

---

26-1880

**Universal Pump and Pressure Indicating Panel 1700Kpa.**

---

26-1926

**Nylon Tubing 6mm Od 3500Kpa.**

---

27-1293

**Distance Piece Stainless Steel for Use with Submersible Load Cells and Axial Strain Transducers.**

---

27-1500/01

**GDU 8 Channel Data Acquisition Unit 220-240 V 50/60 Hz, 1 Ph.**

---

27-1553

**S-Type Load Cell 10 kN.for Triaxial Tests. Fitted with 5 Pin Din Plug.**

---

27-1617

**Axial Strain Transducer Assembly 50mm Travel Fitted with 5 Pin Din Plug.**

---

27-1633

**Pressure Transducer Assembly 1700Kpa Fitted with 5 Pin Din Plug.**

---

27-1753

**DS7.2 Undrained Triaxial Shear Strength Program for Windows 7, 32/64 bit**

---

83-1730/01

**Air Compressor**

---

24-9150/01

**Cbr-Test 50 Machine 50kN Capacity BS and ASTM Supplied with Stabilising Bar.**

---

27-1559

**50kN S-type Load Cell**

---

27-1705

**CBR Penetration Transducer 50mm Travel Fitted with 5 Pin Din Plug.**

---

24-9182

**Penetration Piston**

---

24-9188

**Bracket and Adaptor. Dual Purpose Mounting Bracket for CBR Penetration Gauges EL24-9184/EL24-9186**

---

24-9214

**2Kg Annular Surcharge Weight**

---

24-9216

**2Kg Split Surcharge Weight.**

---

---

81-0521

**Stopwatch**

---

47-5175

**Compact Core Drill**

---

47-5565

**Core Barrel 100 mm**

---

47-5605

**Core Barrel 150 mm**

---

81-0100

**Spatula 100 mm**

---

81-0120

**Spatula 150 mm**

---

81-0140

**Spatula 200 mm**

---

81-0180

**Chattaway Spatula 125 mm**

---

24-0545/01

**Semi-Automatic Cone Penetrometer**

---

24-0811

**Rod Comparator**

---

24-0430

**Glass Plate.**

---

25-0402

**Consolidation Frame One Dimensional Consolidation Incremental Loading Device.**

---

25-0408

**Set of Weights 100Kg Total Weight.**

---

25-0503

**Consolidation Cell/ Oedometer Complete 75mm Diameter Sample**

---

25-0509

**Calibration Disc 75mm Cell**

---

27-1773

**DS7.2 One-Dimensional Consolidation Program for Windows 7, 32/64 bit**

---

27-1300/01

**DSU Electronic Readout and Control System 220 - 240 V AC 50/60 Hz**

---

27-1649

**Consolidation Transducer Assembly 10mm Travel Fitted with 5 Pin Din Plug.**

---

38-0320/01

**Air Compressor**

---

81-0200

**Aluminium Scoop Small**

---

81-0220

**Aluminium Scoop Large**

---

81-0222

**Scoop - 250 mm long**

---

23-1543

**Stillson Wrench Size 14.**

---

23-1547

**Handle and T Piece for Use with EL23-1541.**

---

23-1587

**Jarring Link for Driving Sample Tubes.**

---

23-1617

**Spiral Auger 40mm Diameter. One Piece Model**

---

23-1501

**100mm Dia Soil Auger Head**

---

23-1504

**150mm Dia Soil Auger Head**

---

23-1525

**50mm Dia Dutch Soil Auger Head.**

---

---

23-1517

**150mm Dia Gravel Auger Head.**

---

23-1541

**Extension Rod 27mm Diameter 1m Long. for Use with Auger Heads**

---

23-1577

**38mm Diameter Sample Tube 230mm Long Complete with End Caps.**

---

24-4125/01

**High Speed Stirrer Complete with Paddle Cup & Baffle. 220-240V 50/60Hz 1Ph.**

---

24-9198

**BS Cbr Mould Body.**

---

24-9200

**BS Extension Collar**

---

24-9204

**BS Solid Base or Top Plate**

---

23-7452

**Speedy Moisture Tester D2 Large 0-20% Moisture Range. Supplied Less Calcium Carbide**

---

23-7700

**Calcium Carbide Powder 500G.**

---

24-9004

**BS Compaction Rammer 4.5Kg Wt.**

---



## 425 Litre Drying Oven

Code: 78-0135/01

Product Group: [Oven Drying Method](#), [Oven Drying Method](#), [Oven Drying Method](#)

## Standards

EN 12697-32, EN 13280-4, BS 598-104, BS 1377

## Specification

Capacity	425 litres
External Dimensions (l x w x h)	790 x 1350 x 670 mm
Internal Dimensions (l x w x h)	640 x 920 x 760 mm
Fluctuation	$\pm 0.75^{\circ}\text{C}$
Rated power heater elements	2000 W
Shelves supplied	4
Shelf positions	5
Weight	120 kg



## Water Level Indicator with Audio and Light Indicator 200 m

Code: [450-013](#)

Product Group: [Water level indicators](#)

Fitted with 200m Tape

### Further Information

Graduated Every 10 mm.



## Digital Direct/Residual Shear Apparatus Complete with Lever Loading Assembly. 220-240V 50/60Hz 1Ph.

Code: 26-2114/01

Product Group: [Direct/Residual Shear Apparatus](#),  
[Direct/Residual Shear Apparatus](#)

- Microprocessor control
- Large on-board LCD screen display
- Direct entry via touch sensitive keyboard
- Rapid approach and return to start datum
- Fully variable speed, 0.00001 to 9.99999 mm/minute
- Accepts specimens up to 100 mm square

The ELE Direct Shear Apparatus accepts specimens 60 mm, 100 mm square or 2.5 inches in diameter. The use of a microprocessor controlled drive system and keyboard entry gives the apparatus a wide range of features that include pause and speed reset during test, RS 232C interface, operator programming of speed and control functions, self test diagnostics and many other features. A return to start datum provides a positive means of reversing the shearbox when either preparing for a new test or continuing with residual testing procedures.

Safety forward/reverse travel limit switches are fitted as standard and monitored through the electronics system control.

The electronics are housed in a modern moulded shroud, which includes a large LCD display and keyboard entry. The apparatus is enclosed in a robustly constructed case, has been designed for floor mounting and is supplied complete with carriage, loading hanger and 10:1 lever loading device.

## Standards

ASTM D3080, AASHTO T236, BS 1377, EN 1997-2

## Further Information

for 220 - 240 V AC, 50 - 60 Hz, 1 ph.

## Specification

Sample Size

Accepts either 2.42", 2.5" diam.; 60 mm square samples using accessory shear box assemblies, not included.

Speed Range

Variable in either English or Metric units

Shear Force	between 0.000001" (0.00001 mm) to 0.399999" (9.99999 mm) per minute.
Vertical Load	1,000 lbf. (4.5 kN) maximum.
Dimensions	2,200 lbf. (1,000 kN) using 10:1 lever ratio.
Weight	44.7" l. x 12.6" w. x 49.6" h. (1,135 x 320 x 1,260 mm).
	Net 181 lbs. (82 kg).

## Spares/Consumables



### Dial Indicator - 1.0" Range

Code: [88-4100](#)



### Electronic Digital Indicator, 0.600"/15 mm range

Code: [88-4210](#)



### Vertical Dial Indicator, English

Code: [25-0445](#)



## S-Type Load Cell 5 kN.for Use with Direct/Residual Shear Machine. Fitted with 5 Pin Din Plug.

Code: [27-1561](#)


Product Group: [Measurement of Load \(Shear Stress\), Load Measurement](#)

- Repeatability better than  $\pm 0.02\%$  of rated output
- Non-Linearity better than  $\pm 0.03\%$  of rated output
- Supplied complete with 5-pin DIN type connector for connection to GDU

Ideally suited for a wide range of applications, ELE S-type load cells provide high accuracy and minimum deformation. Various models are available, with the necessary adaptors, for use with ELE Triaxial Load Frames, Multiplex 50/Marshall Test 50/CBR Test 50 and Direct Shear machine.

## Standards

BS 1377, ASTM D3080

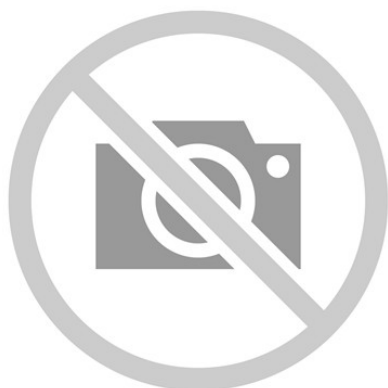


## Set of Weights 50 kg Slotted.

Code: [26-2132](#)

Product Group: [Application of Normal Stress](#)

Normal stress is applied to the specimen through the lever loading device and the appropriate slotted weights

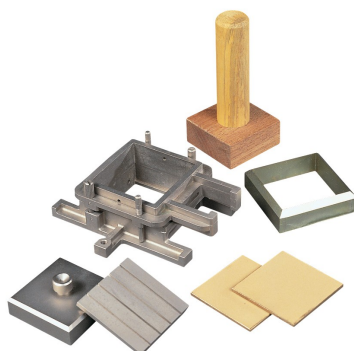

## Specimen Cutter 60mm Sq.


Code: [26-2185](#)

Product Group: [Shear Box Assemblies](#), [Shear Box Assemblies](#)

## Standards


ASTM D3080, AASHTO T236

## Spares/Consumables

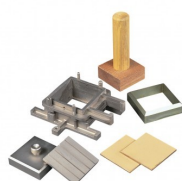

## Specimen Cutter 100mmsq.

Code: [26-2201](#)

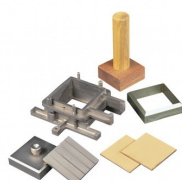

## Specimen Cutter 2.5 Inch Diameter.

Code: [26-2217](#)



## DS7.2 Direct and Residual Shear Strength Program for Windows 7, 32/64 bit

Code: [27-1793](#)

Product Group: [DS7](#), [DS7.2 Direct/Residual Shear Software](#), [Automatic Data Acquisition - Direct Shear](#)

This unique package provides test options for quick undrained or drained shear tests with the user selectable option of residual testing. Individual test results can be linked together to produce the Coulomb Envelope. Printouts and plots are available for sample description and basic test data such as moisture content, etc. Realtime plots of settlement, shear versus displacement and vertical displacement during shearing is readily available via the PC screen or printer.



## Horizontal Displacement Transducer Assembly 15mm Travel 5 Pin Din Plug Mounting Pillar

Code: [27-1697](#)

Product Group: [Displacement Transducers, Measurement of Horizontal and Vertical Movement, Displacement Measurement](#)

- Ideally suited for use with GDU for accurate displacement measurements
- Models available for use in consolidation, shear, CBR and triaxial test applications
- Supplied complete with mounting hardware for specified products

Displacement Transducers are used in consolidation, shear, CBR and triaxial test applications for accurate displacement measurements. They are supplied complete with a 5-pin DIN type connector for direct connection to the GDU.

## Specification

Construction	Fully encapsulated electronics, sealed in a stainless steel case
Excitation	13 V DC
Connector	5-pin DIN type
Mounting bracket	Included as standard
Weight kg	0.45
Construction	Fully encapsulated electronics, sealed in a stainless steel case.
Excitation	10vDC.
Connector	5-Pin DIN type.
Mounting Bracket	Included as standard.
Weight	Net 1 lb. (0.45 kg).

## Spares/Consumables



## CBR Displacement Transducer

Code: [27-1706](#)



## Vertical Displacement Transducer Assembly 15mm Travel with 5 Pin Din Plug Bracket for Shear Box

Code: [27-1689](#)

Product Group: [Displacement Transducers, Measurement of Horizontal and Vertical Movement, Displacement Measurement](#)

0 to 10 mm range. For use with Direct/Residual Shear Machines. •Ideally suited for use with GDU for accurate displacement measurements

- Models available for use in consolidation, shear, CBR and triaxial test applications
- Supplied complete with mounting hardware for specified products

Displacement Transducers are used in consolidation, shear, CBR and triaxial test applications for accurate displacement measurements. They are supplied complete with a 5-pin DIN type connector for direct connection to the GDU.

## Specification


Construction	Fully encapsulated electronics, sealed in a stainless steel case
Excitation	12 V DC
Connector	5-pin DIN type
Mounting bracket	Included as standard
Weight kg	0.45
Construction	Fully encapsulated electronics, sealed in a stainless steel case.
Excitation	10vDC.
Connector	5-Pin DIN type.
Mounting Bracket	Included as standard.
Weight	Net 1 lb. (0.45 kg).

## Spares/Consumables



## CBR Displacement Transducer

Code: [27-1706](#)

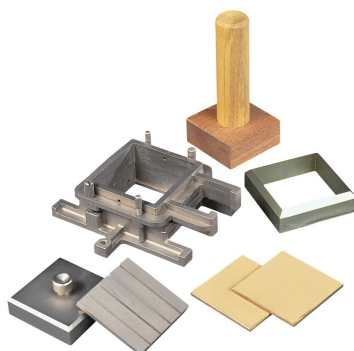

## Shear Box Assembly 60mm Sq.

Code: [26-2181](#)

Product Group: [Shear Box Assemblies](#), [Shear Box Assemblies](#)

- Manufactured from corrosion resistant materials
- Sample size 60 x 60mm x 25mm high meeting BS 1377
- Incorporates PTFE faced box separation screws to reduce friction
- Supplied complete with upper and lower porous plates and loading pad
- Suitable for quick undrained or drained/residual tests

## Standards

BS 1377, EN 1997-2, ASTM D3080, AASHTO T236

## Further Information

All shearbox assemblies are designed to fit the carriage of 26-2114 series Digital Direct/Residual Shear Apparatus. They are supplied complete with three porous plates, one retaining plate and a loading pad. The three sizes supplied comply with the relevant requirements of BS 1377 and ASTM D3080. All assemblies can be used for quick shear tests or drained/residual shear tests.

Optional accessories are available including specimen cutters and extrusion tools.

## Specification


Specimen area	60 x 60 mm
Specimen thickness	25 mm
Weight kg	2
Relevant standard	BS 1377

## Spares/Consumables




## Porous Plate 60mm Sq.

Code: [26-2181/10](#)

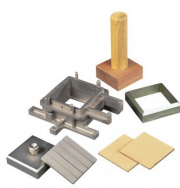

## Specimen Cutter 60mm Sq.

Code: [26-2185](#)

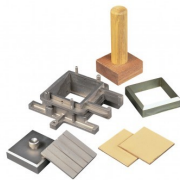

## Specimen Extrusion Tool 60 mm sq.

Code: [26-2189](#)



## Pocket Penetrometer.

Code: [29-3729](#)

Product Group: [In-situ Testing, Pocket Penetrometer](#)

- Direct-reading scale in tons/sq. ft. and kg/sq. cm.
- Ground and polished stainless steel loading piston.
- Calibrated spring and penetrometer body plated for rust resistance and long life.
- Convenient belt-loop style carrying case.
- Optional Adapter Foot for testing very soft materials.


The Pocket Penetrometer was originally developed for use by field personnel in checking visual classification of soils. Data was compiled on several thousand unconfined compressive strength tests of silty clays and clayey soils against the penetrometer readings to develop the scale.

## Further Information

**IMPORTANT:** the readings obtained from the pocket penetrometer do not replace laboratory test results due to the fact that a small area penetration test is inherently liable to give misleading results. The instrument should not be used for obtaining foundation design data.

## Specification

Range	0.25 to 4.5 tons/sq. ft. (kg/sq. cm).
Scale Divisions	0.25 tons/sq. ft. (kg/sq. cm).
Load Piston	1/4" (6 mm) diam.; stainless steel.
Carrying Case	Canvas; belt-loop style.
Dimensions	3/4" diam. x 6-3/8" l. (19 x 162 mm).
Weight	Net 7 oz. (198 g).

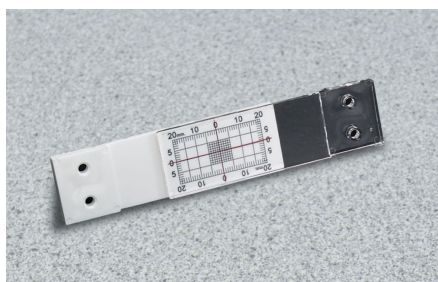

## Calibrated Crack Monitor

Code: [35-2510](#)

Product Group: [Calibrated Crack Monitor](#)

Includes crack progress chart.

## Specification

Construction	10 Hz to 100 kHz in 4 switched ranges.
Discrimination	0.5 mm.
Max. Crack Width Movement	3/4" (20 mm); longitudinal.
Max. Upward Movement	3/8" (10 mm); transverse.
Coeff. Of Thermal Expansion	3.80 x 10 <sup>-5</sup> in/in/°F. (6.84 x 10 <sup>-5</sup> mm/mm/°C).
Dimensions	Grid: 1-1/2" x 3/4" (40 x 20 mm). Plates: 1-1/4" x 4" x 1/4" (32 x 102 x 6.3 mm) ea. Overall: 1-1/4" x 5-3/4" x 1/4" (32 x 146 x 6.3 mm).
Weight	Net 2 oz. (57 g).



## Electronic Balance - 2 500 g x 0.01 g

Code: [78-5447/01](#)

Product Group: [Electronic Balances](#)

## Further Information

**\*\*Not available for sale in the USA\*\***

## Specification

Capacity resolution	2500 g x 0.01 g
Pan size	160 x 160 mm
Mains and battery	No
Dimensions (l x w x h)	260 x 170 x 90 mm
Weight	6 kg




## Moisture Content Tin

Code: [81-2979](#)

Product Group: [Moisture Content Tin and Sample Containers](#)

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***

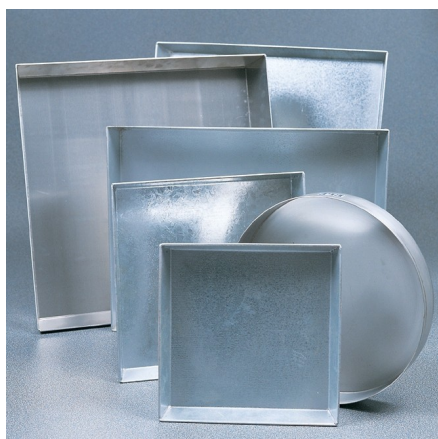


## Sample Tray - 306 x 306 x 38 mm

Code: [81-4020](#)

Product Group: [Sample Trays](#)

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***

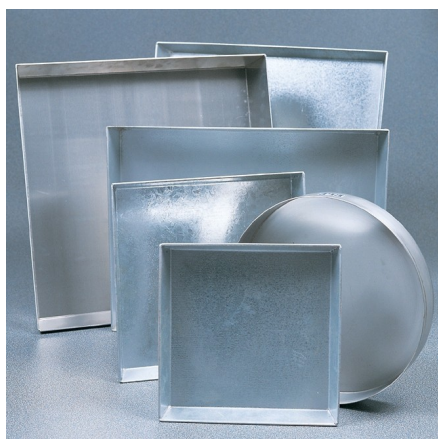


## Sample Tray - 406 x 406 x 50 mm

Code: [81-4030](#)

Product Group: [Sample Trays](#)

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***

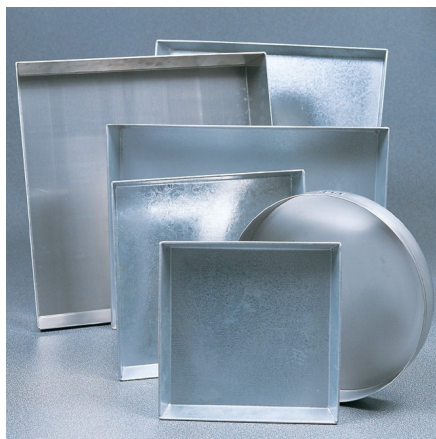


## Sample Tray - 610 x 610 x 63 mm

Code: [81-4080](#)

Product Group: [Sample Trays](#)

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***

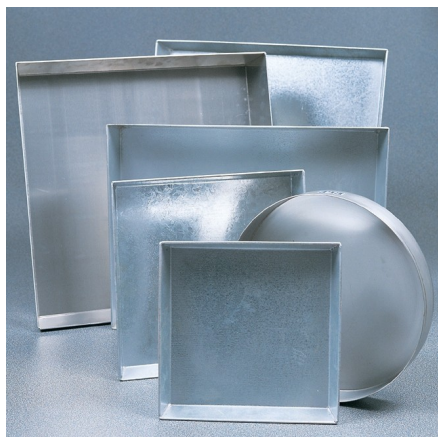


## Sample Tray - 910 x 910 x 76 mm

Code: [81-4160](#)

Product Group: [Sample Trays](#)

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***

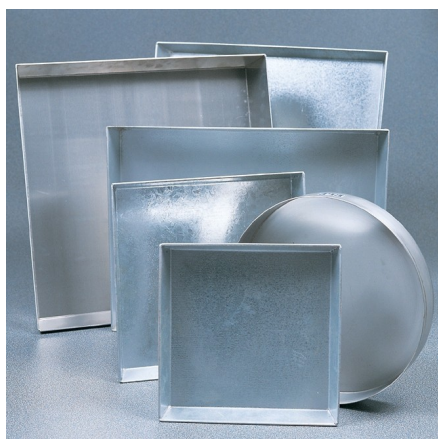

## Sample Tray - 1200 x 1160 x 50 mm

Code: [81-4230](#)

Product Group: [Sample Trays](#)

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## Vacuum Pyknometer Apparatus

Code: 45-9305/01

Product Group: Vacuum Pyknometer

- Large capacity design minimises segregation effects
- Lightweight polycarbonate construction
- Transparent top for visual observations

The Vacuum Pyknometer is a large capacity unit used in the Rice Test for determining the maximum specific gravity of bituminous paving mixtures.

The Pyknometer has a total volume of approximately 10 litres and will conveniently accept samples of 6000 grams to minimise segregation effects. The unit is constructed of lightweight polycarbonate, with the upper half being transparent for visual observation of the effects of the vacuum.

The Vacuum Pyknometer Apparatus consists of a 6000 g pyknometer, vacuum pump with control valves/gauges, water trap and connection tubing.

## Standards

EN 12697-5

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***

Supplied complete with 6000 g pyknometer, vacuum pump with control valves/gauges, water trap and connection tubing. For 220 - 240 V AC, 50 Hz, 1ph.

## Specification

Dimensions	273 x 406 mm (outside diameter x height)
Capacity	Approx. 10 litres, 6000 g sample weight
Connections	Water inlet valve; quick disconnect for vacuum gauge and hose
Weight	3.6 kg



## Rotatest 3000

Code: 45-3815/01

Product Group: Asphalt Centrifuge Extractors

Centrifuge extractor used to determine the quantitative amount of bitumen in bituminous paving mixtures. Variable speed control from 0 to 3600 rpm through the front panel mounted control knob and brake control included for rapid deceleration.

Precision machined aluminium removable cover with integral cup for adding solvent, with sealed cast aluminium housing.

For 220 V AC, 50 - 60 Hz, 1ph.

## Standards

EN 12697-1, ASTM D2172, AASHTO T164

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***

3000 g capacity. Supplied with 100 Filter Discs. For 220 V AC, 50 - 60 Hz, 1ph.



## Clamped Boss Load Ring - 28.0 kN

Code: 78-0760

Product Group: Clamped Boss Load Rings, Digital Tritest 50 Load Frame, Proving Rings, CBR-Test 50 Machine, Conversion of In-situ to Laboratory CBR, CBR Loading Press, Hand-Operated, Force measurement, Load Measurement, Load Measurement

## Standards

BS 1377, BS 1924

## Specification

Capacity: kN, kgf, lbf	28.0, 2800, 6000
Typical Design sensitivity: N/div, kgf/div, lbf/div	25.5, 2.54, 5.45
Overall height mm	248
Approx weight kg	5.4
Capacity	28 kN
Value of CBR	Average range of CBR
Capacity - lbf	6,000
Capacity - kN	28
Capacity - kgf	2,800
Typical Design Sensitivity - lbf/div	5.45
Typical Design Sensitivity - kN/div	25.5
Typical Design Sensitivity - Kgf/div	2.54
Overall Height	9.76" (248 mm)
Approx Weight	11 .9 lbs.(5.4 kg)

## Spares/Consumables



### Spare Dial Indicator for Load Rings

Code: 78-5461



## Cbr Penetration Piston (Adjustable).

Code: [24-9183](#)

Product Group: [In-situ CBR](#), [Conversion of In-situ to Laboratory CBR](#), [Penetration Measurement](#)

As 24-9182 but with a coarse stem adjustment. This piston is particularly useful for in-situ testing.

## Standards

BS 1377, BS 1924



## Penetration Dial Gauge BS

Code: [24-9186](#)

Product Group: [In-situ CBR](#), [Conversion of In-situ to Laboratory CBR](#), [Penetration Measurement](#)

Complete with rack extensions and chisel edge anvil. 25 mm travel x 0.01 mm divisions.

## Standards

BS 1377, BS 1924



## 45kN (10000Lb) Capacity Mechanical Jack.

Code: [24-9290](#)

Product Group: [In-situ CBR](#), [Conversion of In-situ to Laboratory CBR](#)

The body is corrosion protected and houses an enclosed worm and wheel gear. The gear ratio has been carefully selected to provide a handwheel speed that can be comfortably maintained, particularly with soils of high CBR value. A quick-release device in the screwjack allows the plunger to be rapidly adjusted prior to the test.

## Standards

BS 1377, BS 1924



## Ball Seating for EL 24-9290 45 kN Jack

Code: [24-9300](#)

Product Group: [In-situ CBR](#)

For fitting between the mechanical jack and reaction point. The ball seating is used when testing on undulating ground to ensure that the jack, load measuring ring and penetration piston are truly vertical. Non-axial loading of the load ring will give false results and will eventually damage the ring itself.

## Standards

BS 1377, BS 1924



## Set of Extension Rods Complete

Code: [24-9308](#)

Product Group: [In-situ CBR](#)

Made from high quality steel with large section thread for quick assembly.

## Standards

BS 1377, BS 1924



## Datum Bar Assembly.

Code: [24-9312](#)

Product Group: [In-situ CBR](#)

Comprising 2 tripod stands and a datum bar.

## Standards

BS 1377, BS1924



## 10Lb (4.5Kg) Annular Surcharge Weight.

Code: [24-9320](#)

Product Group: [In-situ CBR](#)

## Standards

BS 1377, BS 1924



## 10Lb (4.5Kg) Slotted Surcharge Weight.

Code: [24-9322](#)

Product Group: [In-situ CBR](#)

### Standards

BS 1377, BS 1924



## Land Rover Bracket to Attach EL29-200 Jack. for Land Rovers Models 90 & 110 From 1983 Onwards.

Code: [24-9298](#)

Product Group: [In-situ CBR](#)

Fits all models in Land Rover series 90 and 110.

### Standards

BS 1377, BS 1924



## **Cbr/Core Cutter Extruder Frame and Hydraulic Jack Extrudes 150mm/6 Inch Diameter Specimens.**

Code: [23-4250](#)

Product Group: [Soil Extruders](#)

Comprises a frame and hydraulic jack with adaptor plate supplied. Extrudes samples from BS CBR Mould and ASTM CBR Mould.

## **Standards**

BS 1377-1



## Adaptor Plate for 23-4250 to Extrude 100mm/4 Inch Diameter and Marshall Specimens.

Code: [23-4300](#)

Product Group: [Soil Extruders](#)


For use with 23-4250. Comprising an adaptor plate, retaining screws and a nominal 100 mm ram plunger. Enables extrusion from all ELE 100 mm moulds and core cutters listed in the table.

## Standards

BS 1377-1

## Further Information

Two extruders comprising a frame and hydraulic jack supplied with adaptor plates to enable a range of sample extrusion from all ELE moulds indicated in the table.

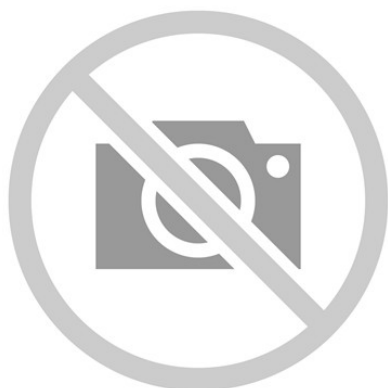

## 200 mm Diameter Receiver

Code: 79-0020

Product Group: Sieve Lids and Receivers ISO and BS, 200mm Diameter BS Sieves, 200mm Diameter BS Sieves, 200mm Diameter BS Sieves

## Standards

BS 410-1, ISO 3310

## Further Information

\*\*NOT AVAILABLE FOR SALE IN THE USA\*\*



## 200mm Dia BS Sieve 63 Mic Stainless Steel Mesh.

Code: [79-0070](#)

Product Group: [200mm Diameter BS Sieves](#), [200mm Diameter BS Sieves](#), [200mm Diameter BS Sieves](#)

### Standards

BS 410-1, ISO 3310, ISO 565, EN933-2

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## 200mm Dia BS Sieve 75 Mic Stainless Steel Mesh.

Code: 79-0080

Product Group: 200mm Diameter BS Sieves, 200mm Diameter BS Sieves, 200mm Diameter BS Sieves

### Standards

BS 410-1, ISO 3310, ISO 565, EN933-2

### Further Information

\*\*NOT AVAILABLE FOR SALE IN THE USA\*\*



## 200mm Dia BS Sieve 150 Mic Stainless Steel Mesh.

Code: [79-0120](#)

Product Group: [200mm Diameter BS Sieves](#), [200mm Diameter BS Sieves](#), [200mm Diameter BS Sieves](#)

### Standards

BS 410-1, ISO 3310, ISO 565, EN933-2

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## 200mm Dia BS Sieve 212Mic Stainless Steel Mesh.

Code: 79-0140

Product Group: 200mm Diameter BS Sieves, 200mm Diameter BS Sieves, 200mm Diameter BS Sieves

### Standards

BS 410-1, ISO 3310, ISO 565, EN933-2

### Further Information

\*\*NOT AVAILABLE FOR SALE IN THE USA\*\*



## 200mm Dia BS Sieve 300Mic Stainless Steel Mesh.

Code: 79-0160

Product Group: 200mm Diameter BS Sieves, 200mm Diameter BS Sieves, 200mm Diameter BS Sieves

### Standards

BS 410-1, ISO 3310, EN933-2, ISO 565

### Further Information

\*\*NOT AVAILABLE FOR SALE IN THE USA\*\*



## 200mm Dia BS Sieve 425Mic Stainless Steel Mesh.

Code: [79-0180](#)

Product Group: [200mm Diameter BS Sieves](#), [200mm Diameter BS Sieves](#), [200mm Diameter BS Sieves](#)

### Standards

BS 410-1, ISO 3310, EN933-2, ISO 565

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## 200mm Dia BS Sieve 600Mic Stainless Steel Mesh.

Code: 79-0200

Product Group: 200mm Diameter BS Sieves, 200mm Diameter BS Sieves, 200mm Diameter BS Sieves

### Standards

BS 410-1, ISO 3310, EN933-2

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## 200mm Dia BS Sieve 1.18mm Stainless Steel Mesh.

Code: 79-0240

Product Group: 200mm Diameter BS Sieves, 200mm Diameter BS Sieves, 200mm Diameter BS Sieves

### Standards

BS 410-1, ISO 3310, EN933-2, ISO 565

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## 200mm Dia BS Sieve 2.00mm Stainless Steel Mesh.

Code: [79-0270](#)

Product Group: [200mm Diameter BS Sieves](#), [200mm Diameter BS Sieves](#), [200mm Diameter BS Sieves](#)

### Standards

BS 410-1, ISO 3310, EN933-2, ISO 565

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## 200 mm Diameter Lid

Code: 79-0010

Product Group: Sieve Lids and Receivers ISO and BS, 200mm Diameter BS Sieves, 200mm Diameter BS Sieves, 200mm Diameter BS Sieves

## Standards

BS 410-1, ISO 3310

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## 300mm Dia Receiver.

Code: 79-2020

Product Group: Sieve Lids and Receivers ISO and BS, 300mm Diameter BS Sieves, 300mm Diameter BS Sieves, 300mm Diameter BS Sieves

## Standards

BS 410-1, ISO 3310

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## 300mm Dia BS Sieve 2.36mm Stainless Steel Mesh.

Code: 79-2280

Product Group: 300mm Diameter BS Sieves, 300mm Diameter BS Sieves, 300mm Diameter BS Sieves

### Standards

BS 410-1, ISO 3310, ISO 565, EN933-2

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## 300mm Dia BS Sieve 3.35mm Stainless Steel Mesh.

Code: 79-2300

Product Group: 300mm Diameter BS Sieves, 300mm Diameter BS Sieves, 300mm Diameter BS Sieves

### Standards

BS 410-1, ISO 3310, EN933-2, ISO 565

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## 300mm Dia BS Sieve 5.00mm Perforated Plate.

Code: 79-2515

Product Group: 300mm Diameter BS Sieves, 300mm Diameter BS Sieves, 300mm Diameter BS Sieves

### Standards

BS 410-1, ISO 3310, ISO 565, EN933-2

### Further Information

\*\*NOT AVAILABLE FOR SALE IN THE USA\*\*



## 300mm Dia BS Sieve 6.30mm Perforated Plate.

Code: 79-2525

Product Group: 300mm Diameter BS Sieves, 300mm Diameter BS Sieves, 300mm Diameter BS Sieves

### Standards

BS 410-1, ISO 3310, ISO 565, EN933-2

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## 300mm Dia BS Sieve 10.0mm Perforated Plate.

Code: 79-2555

Product Group: 300mm Diameter BS Sieves, 300mm Diameter BS Sieves, 300mm Diameter BS Sieves

### Standards

BS 410-1, ISO 3310, ISO 565, EN933-2

### Further Information

\*\*NOT AVAILABLE FOR SALE IN THE USA\*\*



## 300mm Dia BS Sieve 14.0mm Perforated Plate.

Code: 79-2575

Product Group: 300mm Diameter BS Sieves, 300mm Diameter BS Sieves, 300mm Diameter BS Sieves

### Standards

BS 410-1, ISO 3310, ISO 565, EN933-2

### Further Information

\*\*NOT AVAILABLE FOR SALE IN THE USA\*\*



## 300mm Dia BS Sieve 20.0mm Perforated Plate.

Code: 79-2595

Product Group: 300mm Diameter BS Sieves, 300mm Diameter BS Sieves, 300mm Diameter BS Sieves

### Standards

BS 410-1, ISO 3310, ISO 565, EN933-2

### Further Information

\*\*NOT AVAILABLE FOR SALE IN THE USA\*\*



## 300mm Dia BS Sieve 28.0mm Perforated Plate.

Code: 79-2615

Product Group: 300mm Diameter BS Sieves, 300mm Diameter BS Sieves, 300mm Diameter BS Sieves

### Standards

BS 410-1, ISO 3310, ISO 565, EN933-2

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## 300mm Dia BS Sieve 37.5mm Perforated Plate.

Code: 79-2640

Product Group: 300mm Diameter BS Sieves, 300mm Diameter BS Sieves, 300mm Diameter BS Sieves

### Standards

BS 410-1, ISO 3310, ISO 565, EN933-2

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## 300mm Dia BS Sieve 50.0mm Perforated Plate.

Code: 79-2655

Product Group: 300mm Diameter BS Sieves, 300mm Diameter BS Sieves, 300mm Diameter BS Sieves

### Standards

BS 410-1, ISO 3310, ISO 565, EN933-2

### Further Information

\*\*NOT AVAILABLE FOR SALE IN THE USA\*\*



## 300mm Dia BS Sieve 63.0mm Perforated Plate.

Code: 79-2670

Product Group: 300mm Diameter BS Sieves, 300mm Diameter BS Sieves, 300mm Diameter BS Sieves

### Standards

BS 410-1, ISO 3310, ISO 565, EN933-2

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## 300mm Dia BS Sieve 75.0mm Perforated Plate.

Code: 79-2680

Product Group: 300mm Diameter BS Sieves, 300mm Diameter BS Sieves, 300mm Diameter BS Sieves

### Standards

BS 410-1, ISO 3310, ISO 565, EN933-2

### Further Information

\*\*NOT AVAILABLE FOR SALE IN THE USA\*\*



## 300mm Dia Lid.

Code: 79-2010

Product Group: Sieve Lids and Receivers ISO and BS, 300mm Diameter BS Sieves, 300mm Diameter BS Sieves, 300mm Diameter BS Sieves

## Standards

BS 410-1, ISO 3310

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## Liquid Limit Device ASTM/ Aashto Hand-Operated W/ Revolution Counter. Supplied Less Grooving Tool.

Code: [24-0434](#)

Product Group: [Casagrande Method](#)

Complete with revolution counter. Supplied less grooving tool.

### Standards

ASTM D4318, AASHTO T89



## Casagrande Grooving Tool Aashto

Code: [24-0461](#)

Product Group: [AASHTO Grooving Tool, Casagrande Method, Motorized Liquid Limit Device](#)

- Rust resistant brass construction.
- 1 cm gage block located at end of handle.

The AASHTO Grooving Tool is used to control the width of the soil groove in the liquid limit cup, in accordance with AASHTO specifications.

## Standards

AASHTO T89

## Further Information

Brass construction with a gauge height of 1 cm.

## Specification

Construction	Brass.
Gauge Height	1 cm.
Weight	Net 3 oz. (85 g).

## Spares/Consumables



## ASTM Plastic Grooving Tools

Code: [24-0451](#)



## Timer Clock

Code: [81-0518](#)

Product Group: [Rice Test Vibrator, Watches and Clocks](#)

Accessory

## Standards

EN 12697-5

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***

## Spares/Consumables

### Consistency Plunger

Code: [38-2010/10](#)





## Trowel - Gardeners type

Code: [81-0310](#)

Product Group: [Trowels and Floats](#)

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## ASTM Compaction Rammer 2.5Kg.

Code: [24-9063](#)

Product Group: [Proctor compaction](#), [Standard Compaction Hammer](#)


50.8mm diameter x 305mm deep.

## Standards

ASTM D1557, AASHTO T180, ASTM D558, ASTM D559, ASTM D560, ASTM D698, AASHTO T99, AASHTO T134, AASHTO T135, AASHTO T136

## Specification

Hammer	2" diam. (50.8 mm); 5-1/2 lbs. (2.49 kg).
Drop	12 " (305 mm).
Guide Sleeve	Machined steel tubing with air pressure release holes
Finish	Corrosion resistant
Weight	4.1 kg (9 lbs)

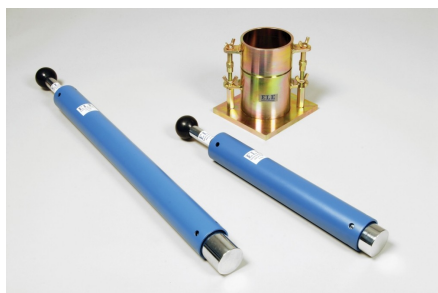

## Straight Edge 300mm.

Code: [24-9010](#)

Product Group: [BS/EN compaction test 4.5kg, Proctor compaction, Straightedge](#)


300 mm

## Standards

BS 1377-4, BS 1924-2, ASTM D698, ASTM D1557, AASHTO T99, EN 13286-2, EN 13286-4, ASTM D1883, AASHTO T193, ASTM D558, ASTM D559, ASTM D560, AASHTO T134, AASHTO T135, AASHTO T136, AASHTO T180

## Specification

Construction	Flat ground tool steel; beveled edge.
Dimensions	12 " l. x 1-1/4" w. x 1/8" thick (305 x 32 x 3 mm).
Weight	Net 9 oz. (255 g).

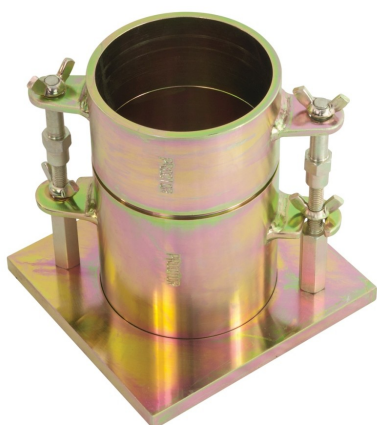

## Proctor Mould

Code: 24-9060

Product Group: Accessories for ASTM and Proctor compaction, Proctor compaction

## Standards

ASTM D558, ASTM D559, ASTM D560, ASTM D698, ASTM D1557, AASHTO T99, AASHTO T134, AASHTO T135, AASHTO T136, AASHTO T180

## Specification

Dimensions	101.6 mm dia x 116.4 mm high
Rammer Mould Volume	1/30 ft <sup>3</sup>
Construction	All steel, threaded studs with wing nuts, plated.
Weight	5.4 kg



## Distilled Water Still

Code: [82-8020/01](#)

Product Group: [Distilled Water Still](#)

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***

## Specification

Dimensions (l x w x h)	590 x 530 x 940 mm
Boiling chamber	Glass
Condenser	Borosilicate glass
Output	3.5 litres/hr when permanently connected to water supply
Electrical supply	220 – 240 V AC, 50 - 60 Hz, 1 ph
Rated power	2.75 kW
Weight	12 kg



## 38mm Hand Operated Hydraulic Sample Extruder with Trimming Knife 38mm Split Former & Cutting Tool.

Code: [23-4090](#)

Product Group: [Soil Extruders](#)

This Sample Extruder comprises a vertically mounted lever action hydraulic jack, with the body extended to form a chamber which accommodates a 38 mm diameter sample tube. Supplied complete with trimming knife, 38 mm split former and wire saw.

## Standards

BS 1377-1



## Hand Operated Soil Lathe for 38mm Dia Specimens Up to 100mm Long.

Code: 23-5800

Product Group: Soil Lathes, Soil Trimmers (Lathes)

For producing 38 mm diameter specimens. The lathe platen is adjustable in height and will accept specimens up to 100 mm in length.

## Standards

BS 1377-1

## Further Information

- Lightweight frame construction for both laboratory and field use.
- Sturdy plated steel uprights serve as guides for wire saw during final trimming procedure.
- Adjustable upper platen trimming for various sample heights.

Wire Saw and other trimming accessories not included; order separately.




## Trimming Knife

Code: [81-0710](#)

Product Group: [Soil Lathes](#), [Miscellaneous Laboratory Hardware](#), [Soil Trimmers \(Lathes\)](#)

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***

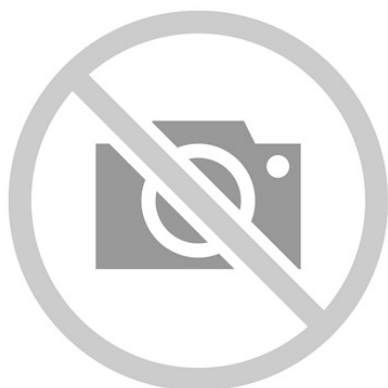

## Sodium Hexametaphosphate 500G.

Code: [24-4145](#)

Product Group: [Sodium Hexametaphosphate,](#)  
[Mechanical Analysis Stirrer](#)

## Standards

ASTM D422, AASHTO T88, ASTM E100

## Spares/Consumables



## Solid Rubber Stopper

Code: [4699-0881](#)



## Soil Hydrometer BS EN DD ENV graduated 0.995 to 1.030 g/ml

Code: [24-4620](#)

Product Group: [Soil Hydrometers](#)

Graduated 0.995 to 1.030 g/ml.

## Standards

ASTM D422, BS 1377, EN 1997-2, ASTM E100, AASHTO T88



## Hydrometer Sedimentation Cylinder

Code: [24-4700](#)

Product Group: [Hydrometer Sedimentation Cylinder](#),  
[Hydrometer Jar](#)

Glass, 1000 ml capacity complete with rubber bung.

## Standards

BS 1337, ASTM D422, AASHTO T88

## Further Information

1000MI Glass

## Spares/Consumables



## Solid Rubber Stopper

Code: [4699-0881](#)



## ELE Sieve Shaker

Code: [80-0200/01](#)

Product Group: [ELE Sieve Shaker](#)

The ELE sieve shaker is powered by an electromagnetic drive that has no rotating parts to wear making it maintenance free and extremely quiet in operation.

The unit features a triple Vertical-Lateral-Rotary vibrating action that moves the sample over the sieve producing faster more efficient sieving, while the rapid vertical movements also help keep the apertures from blinding.

The shaker is ideal for laboratory or on site use. It is robust, compact and sufficiently lightweight to be portable. The separate digital microprocessor controlled console unit incorporates a keypad for setting the sieving program and is isolated from any effects of vibration from the shaker.

As standard the shaker includes, timer 0-999 minutes, adjustable vibration intensity and adjustable intermittent or continuous operation.

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***

The unit accepts up to ten 200 mm or 8 inch, full height, diameter sieves and lid and receiver, or up to six 300 mm or 12 inch diameter sieves and lid and receiver. Complete as specified. Dimensions (l x w x h) 380 x 440 x 1085 mm. For 220 - 240 V AC, 50 Hz 1ph.



## Sieve Brush Brass and Nylon

Code: [79-7200](#)

Product Group: [Sieve Brushes](#)

Double-ended, brass and nylon bristle

## Standards

ASTM E11

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## Dynamic Cone Penetrometer 8Kg Hammer (Trl Design).

Code: [29-3720](#)

Product Group: [In-situ Testing](#)

The TRL (Transport Research Laboratory) Dynamic Cone Penetrometer (DCP) is used for rapid in-situ measurement of the structural properties of existing road pavement constructed with unbound materials. The unit incorporates an 8 kg weight with a drop of 575 mm, and a 20 mm diameter cone fitted to the end of the shaft, allowing measurements to be made down to a depth of approximately 850 mm.

Readings are usually taken after a set number of blows, changing the number according to the strength of the layer being penetrated. For good granular bases, readings every five to ten blows are satisfactory, but for weaker sub-base layers and subgrades, readings every one to two blows may be appropriate.

The DCP requires three operators, one to hold the instrument in a vertical position, one to raise the hammer and let it fall and one to record the results. A typical test takes only a few minutes, providing a very efficient method of obtaining information which would otherwise require the excavation of test pits. Where pavement layers have different strengths, boundaries can be identified and layer thickness determined.

## Further Information

Supplied complete with all necessary tools, assembly and operating instructions.

## Spares/Consumables



### Spare Cone for Dynamic Cone Penetrometer.

Code: [29-3720/10](#)



## Spare Cone for Dynamic Cone Penetrometer.

Code: [29-3720/10](#)

Product Group: [In-situ Testing](#)



## 150mm Sand Pouring Cylinder.

Code: [29-4100](#)

Product Group: [Sand Replacement](#)

### Standards

BS 1377, BS 1924




## 150mm Calibrating Container 150mm Id X Deep with 250mm Dia Rim.

Code: [29-4120](#)

Product Group: [Sand Replacement](#)

### Standards

BS 1377, BS 1924

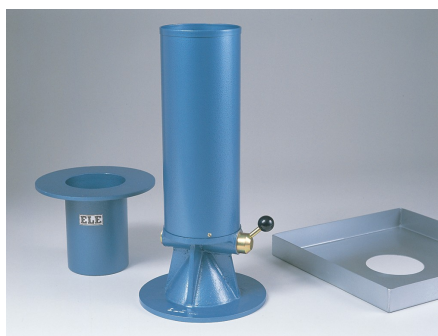

## Metal Tray 300mm Sq X 40mm Deep with A 150mm Dia Hole.

Code: [29-4140](#)

Product Group: [Sand Replacement](#)

### Standards

BS 1377, BS 1924



## Mortar and Pestle Porcelain.

Code: [23-3505](#)

Product Group: [Sample Reduction](#)

Thick walled porcelain mortar; 107mm internal diameter and porcelain pestle.



## AutoComp 100-A

Code: 45-6600/01

Product Group: Automatic Compaction

- Fully automatic, simple to operate
- Built-in safety features
- Uniform compaction
- Automatic blow counter

This ruggedly constructed automatic compactor provides a consistent and even degree of compaction. The unit incorporates a compaction pedestal comprising a laminated hardwood block secured to a concrete base by a 300 mm square x 25 mm thick steel plate. The mechanism lifts the 4535 g hammer and automatically releases it at the specified height of 457 mm. The conveniently positioned control fascia panel comprises of a mains light, start and stop buttons and a direct-reading counter used to set the required number of blows.

During operation the AutoComp 100-A automatically counts down to zero. Dual rammer pick-ups have been incorporated, reducing stress on the machine's internal mechanism.

Particular attention has been paid to operator safety by the inclusion of various in-built safety features.

## Standards

EN 12697-10, EN 12697-30

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***

## Specification

Dimensions (l x w x h)	535 x 535 x 1880 mm
Compaction foot diameter	98.52 mm

# Product Sheet

[www.ele.com](http://www.ele.com)  
+44 (0) 01525 249 200



Sliding weight	4535 g
Height of drop	457 mm
Weight	278 kg



Compaction Mould

Code: 45-6310  
Product Group: Accessories for manual and automatic compaction, Asphalt Compaction Mould  
Comprising of mould body, baseplate and combined filling/extraction collar.



Standards

EN 12697-30, ASTM D6926, AASHTO T245

Specification

Construction	Machined seamless steel forming mold; base and collar.
Finish	Plated for rust resistance.
Dimensions	4" (101.6 mm) i.d. x 3" (76.2 mm) internal h. with base.
Weight	Net 6 lbs. (2.7 kg).

## Paper Discs

Code: [45-6462](#)

Product Group: [Accessories for manual and automatic compaction](#), [Filter Paper Discs](#)

Non-absorbent, 99 mm diameter, pack of 100.



## Standards

EN 12697-30

## Specification

Weight

Net 2.9 oz. (82 g).

## Steel Block

Code: [45-6463](#)

Product Group: [Accessories for manual and automatic compaction](#)

100 mm diameter x 50 mm height. For heating the compaction hammer foot.



## Standards

EN 12697-30

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***

## Spares/Consumables



### Baseplate

Code: [45-6310/11](#)



### Compaction Mould Body

Code: [45-6310/10](#)



## Digital Tritest 50 Load Frame

Code: 25-3518/01

Product Group: Digital Tritest 50 Load Frame, CBR Load Frames, Triaxial Load Frames

- Microprocessor control
- Large on-board LED screen display
- Direct entry via a touch sensitive keyboard
- Rapid approach and return to datum of platen
- Fully variable speed, 0.00001 to 9.99999 mm/min
- Samples up to 100 mm diameter

This 50 kN capacity machine, designed primarily for triaxial testing of soil specimens up to 100 mm diameter x 200 mm long, comprises a rigid twin column construction with an integral fully variable microprocessor controlled drive unit and LCD display with a touch sensitive keyboard. The machine is normally bench mounted for ease of installation and operation.

The use of a microprocessor controlled drive system and keyboard entry provides the Digital Tritest 50 with a wide variety of features which include pause and speed reset during test, RS 232C, operator programming of speed and control functions, self test diagnostics and many other features.

A robustly constructed steel case houses the motor drive system with careful attention being given to the prevention of ingress of water or grit. All operating controls are mounted on the front panel of the machine, which is angled and recessed to prevent physical and environmental damage.

## Standards

BS 1377-7, BS 1377-8, BS 1924-2, ASTM D1883, ASTM D2166, ASTM D2850, ASTM D4767, ASTM D7181, AASHTO T99, AASHTO T134, AASHTO T135, AASHTO T136, AASHTO T180, AASHTO T193, AASHTO T208, AASHTO T296, AASHTO T297

## Further Information

Complete with RS 232C interface.

## Specification

Capacity	50kN (11,200 lbf).
Speed Range	English mode: 0.000001 to 0.399999 in/min. Metric mode: 0.00001 to 9.99999 mm/min.
Rapid Approach Speed	1.0 in/min. (25 mm/min.).

# Product Sheet

[www.ele.com](http://www.ele.com)  
+44 (0) 01525 249 200



Platen Travel	100mm (3.9"); limit switch protection.
Platen Diameter	133 mm (5.2")
Vertical Clearance	910 mm, (36 .8") maximum; 305mm, (12") minimum.
Horizontal Clearance	364mm, (15 .3").
Serial Interface	RS232C; programmable baud rate and protocol.
Overall Dimensions	500 x 500 x 1,470 mm, (19.7" w. x 19.7" d. x 57.8" h).
Weight	Net 100kg (220 lbs); Shpg. 136kg (300 lbs).



## 70mm Triaxial Cell 1700Kpa with 5 Pressure/ Drainage Ports. Supplied with Two Valves.

Code: [25-4117](#)

Product Group: [Triaxial Cell](#), [Triaxial Cells](#)

- Working pressure up to 1700 kPa
- All round visibility
- Sample sizes 38 to 100 mm diameter
- Rapid assembly and dismantling
- Accepts a range of interchangeable submersible load transducers

This range of precision made triaxial cells has been designed to meet the requirements of the modern soils laboratory. The cells have been treated to minimise corrosion. Particular attention has been paid to the quality of finish between the piston and the head. Final assembly includes the fitting of an O-ring seal and the use of special lubricant to reduce friction to a minimum and eliminate water leakage.

The piston load capacity is designed to accept high horizontal forces which may be present during the final stages of a test. Each cell has five take-off positions drilled in the base for top drainage/back pressure, pore water pressure and bottom drainage. Two no-volume change valves and an anvil for strain gauge/transducer datum are supplied for fitting to the cell.

A feature of these cells is that they all accept a single diameter piston. The internal height is such that a range of submersible load transducers can be fitted without any modification. Each cell will accept a range of base adaptors and various accessories for testing a wide range of specimens

## Standards

BS 1377, ASTM D2850, ASTM D4767, ASTM D7181, AASHTO T296, AASHTO T297

## Specification

Cell size	70 mm
Max specimen size	70 x 140 mm
Working pressure	1701 kPa
Max piston load	46 kN
Vertical clearance required	430 mm
Horizontal clearance required	180 mm
Weight kg	7.3
Maximum Working Pressure	25 0 psi (1,700 kPa).
Maximum Piston Load	10,100 lbf. (45 kN).

# Product Sheet

[www.ele.com](http://www.ele.com)  
+44 (0) 01525 249 200



Maximum Specimen Size	2.8" (70 mm) diam. x 5.6" (140 mm) l.
Required Clearance	17" (430 mm) vertical; 7.1" (180 mm) horizontal.
Weights	Net 16 lbs. (7.3 kg).



## 70mm Base Adaptor for 70mm Cells.

Code: [25-4176](#)

Product Group: [Base Pedestals](#), [Specimen Base Adaptors](#)

70mm Base Adaptor with Twin Pore Pressure Ports for 70mm Cells.

## Standards

BS 1377, ASTM D2850, ASTM D4767, ASTM D7181, AASHTO T296, AASHTO T297



## Pressure Pad 70mm Diameter.

Code: [25-6430](#)

Product Group: [Specimen Caps, Pressure Pads](#)

70 mm / 2.8" diameter pressure pad. The pad shall have two empty ports and will come complete with two blanking plugs, plastic tubing and connector. Suitable For both drained and undrained tests.

## Standards

ASTM D2850, ASTM D4767, ASTM D5084, AASHTO T296, AASHTO T297, ASTM D7181



## Rubber Membrane 70mm/2.8 Inch Diameter. Pack of 10.

Code: [25-6441](#)

Product Group: [Rubber Membranes](#), [Rubber Membranes](#), [Tri-Flex 2 One-Cell Permeability Test System](#), [Tri-Flex 2 Permeability Test Cell](#)

70 mm / 2.8" mm diameter rubber membrane (Pack Of 10).

## Standards

ASTM D2850, ASTM D4767, ASTM D5084, AASHTO T296, AASHTO T297, ASTM D7181



## Membrane Sealing Ring 70mm Diameter Pack of 10.

Code: [25-6461](#)

Product Group: [Membrane Sealing Rings, Sealing Rings, Tri-Flex 2 Permeability Test Cell](#)

70 mm diameter membrane sealing ring (Pack Of 10).

## Standards

ASTM D2850, ASTM D4767, ASTM D5084, AASHTO T296, AASHTO T297



## Membrane Placing Tool 70mm/2.8 Inch Diameter.

Code: [25-6470](#)

Product Group: [Membrane Placing Tools](#), [O-Ring Placing Tools](#), [Tri-Flex 2 One-Cell Permeability Test System](#)

70Mm/2.8 Inch Diameter Membrane Placing Tool.

## Standards

AASHTO T296, AASHTO T297, ASTM D2850, ASTM D4767, ASTM D5084, ASTM D7181



## Suction Membrane Device 70mm Diameter.

Code: [25-6480](#)

Product Group: [Suction Membrane Devices](#), [Suction Membrane Device](#), [Tri-Flex 2 One-Cell Permeability Test System](#)

70Mm Diameter Suction Membrane Device.



## Two-Way Split Former 70mm Diameter.

Code: [25-6500](#)

Product Group: [Two-way Split Formers](#), [Two-Way Split Formers](#)

70Mm Diameter Two-Way Split Former.



## Bladder-Type Air/Water Pressure Assembly. 1000 Kpa Maximum Working Pressure.


Code: 26-1746

Product Group: [Air/Water Pressure Systems - up to 1000 kPa](#)

With transparent plastic chamber for operating continuously at pressures up to 1000 kPa. A length of tubing is provided for connecting the air/water cylinder outlet to a pressure measuring system.

- Used to supply hydraulic pressure from a pneumatic pressure source.
- Prevents air entering the hydraulic pressure system.
- Maximum working pressure 1000kpa.
- Supplied with connectors and tubing for fitting to pressure measuring systems.

## Spares/Consumables

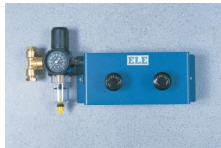

## Pneumatic Pressure Reducing Panel. Provides Two Independent Pressure Outlets 1000 kPa Max.

Code: 26-1760



## Replacement Bladder Wide Neck (38mm Id)

Code: 26-1746/10



## **Pneumatic Pressure Reducing Panel. Provides Two Independent Pressure Outlets 1000 kPa Max.**

Code: **26-1760**

Product Group: **Air/Water Pressure Systems - up to  
1000 kPa**

Comprising two constant pressure reducing valves with inlet water trap and pressure indicator. The unit allows a maximum output pressure of 1000 kPa. Maximum input pressure should not exceed 1400 kPa. The panel has an inlet connector to accept Nylon tubing from the air compressor and two 6 mm outlets for connecting Bladdertype Air/Water Pressure Assemblies. An outlet connector is fitted for the connection of an additional panel using Nylon tubing to increase the total capacity of the system. This outlet is blanked off when not required.



## Nylon Tubing 30 Metre Length.

Code: [26-1769](#)

Product Group: [Air/Water Pressure Systems - up to 1000 kPa](#)

30 metre length. For pressures up to 1700 kPa. Used for connecting Air Compressors to Pneumatic Pressure Reducing Panels, or for connecting two Pressure Reducing Panels together.

## Further Information

Nylon tubing 30 metres with pressure fittings.



## Universal Pump and Pressure Indicating Panel 1700Kpa.

Code: [26-1880](#)

Product Group: [Modular Pressure Panel System](#)

This is the main pressure display in the system for monitoring various pressures and also provides fine control of the pressure within the system using the rotary hand pump. The unit is fitted with a dual calibrated 250 mm diameter pressure gauge, four inlet/outlet no-volume change valves, screw controlled rotary hand pump, water reservoir and isolating valves. The unit is housed in a hinged case for wall or bench mounting. By using an isolating valve the panel may be used to monitor cell or back pressure. 1700 kPa and 250 lbf/in<sup>2</sup>.

## Spares/Consumables



### Pressure Gauge 1700Kpa (250Psi) 250mm Diameter.

Code: [26-1865/10](#)



## Nylon Tubing 6mm Od 3500Kpa.

Code: [26-1926](#)

Product Group: [Permeability of Rock, Volume Change Measurement](#)

6 mm outside diameter x 4 mm inside diameter. For use up to a pressure of 3500 kPa. Priced per metre.



## Distance Piece Stainless Steel for Use with Submersible Load Cells and Axial Strain Transducers.

Code: [27-1293](#)

Product Group: [Submersible Load Transducers](#), [Load Measurement](#), [Load Measurement](#)

Required when using submersible load cells.



## GDU 8 Channel Data Acquisition Unit 220-240 V 50/60 Hz, 1 Ph.

Code: 27-1500/01

Product Group: Data Logging with the GDU, Geotechnical Data Acquisition Unit (GDU), Automatic Data Acquisition - Triaxial, Automatic Data Acquisition - Direct Shear, Automatic Data Acquisition - CBR, Automatic Data Acquisition - Consolidation

The GDU is a stand-alone, multi-tasking, multi-channel data logger, that is reliable and powerful, enabling it to co-ordinate test data from the range of ELE transducers required for various test methods.

The ELE Geotechnical Software package (DS7.1), in conjunction with the GDU and a range of transducers, are the two central components required to create a modern turnkey soil testing system. Being fully modular it can be adapted to a wide range of soil testing laboratory configurations.

- For performing CBR, Consolidation, Direct/Residual Shear and Total & Effective Stress Triaxial tests
- 8 Channels expandable to 32 for performing multiple, concurrent tests for cost savings
- Independent signal conditioning on each channel to maintain data accuracy
- Field-upgradeable software, meaning no downtime for future software and functionality upgrades
- Extended warranty.

## Specification

Case	Aluminum, free standing; houses power supply, analog to digital conversion module and an 8-channel analog input module with transducer energization.
Sockets	Standard 5-pin DIN type.
Input Range	$\pm 5$ volts to $\pm 10$ mV full scale.
Transducer Supply	10vDC.
Dimensions	12.8" w. x 14.3" d. x 6.1" h. (325 x 363 x 155 mm).
Weight	Net 14.08 lbs. (6.4 kg).



## S-Type Load Cell 10 kN.for Triaxial Tests. Fitted with 5 Pin Din Plug.

Code: [27-1553](#)

Product Group: [Load Measurement, Load Measurement](#)

- Repeatability better than  $\pm 0.02\%$  of rated output
- Non-Linearity better than  $\pm 0.03\%$  of rated output
- Supplied complete with 5-pin DIN type connector for connection to GDU

Ideally suited for a wide range of applications, ELE S-type load cells provide high accuracy and minimum deformation. Various models are available, with the necessary adaptors, for use with ELE Triaxial Load Frames, Multiplex 50/Marshall Test 50/CBR Test 50 and Direct Shear machine.



## Axial Strain Transducer Assembly 50mm Travel Fitted with 5 Pin Din Plug.

Code: [27-1617](#)

Product Group: [Axial Displacement](#), [Axial Displacement](#), [Displacement Transducers](#)

0 to 50 mm range. For use with Triaxial Cells.

- Ideally suited for use with GDU for accurate displacement measurements
- Models available for use in consolidation, shear, CBR and triaxial test applications
- Supplied complete with mounting hardware for specified products

Displacement Transducers are used in consolidation, shear, CBR and triaxial test applications for accurate displacement measurements. They are supplied complete with a 5-pin DIN type connector for direct connection to the GDU.

## Specification

Construction	Fully encapsulated electronics, sealed in a stainless steel case
Excitation	10V DC
Connector	5-pin DIN type
Mounting bracket	Included as standard
Weight kg	0.45

## Spares/Consumables



### CBR Displacement Transducer

Code: [27-1706](#)



**Pressure Transducer Assembly 1700Kpa  
Fitted with 5 Pin Din Plug.**

Code: 27-1633

Product Group: [Pressure Transducer](#), [Pressure Measurement](#), [Tri-Flex 2 One-Cell Permeability Test System](#)

Pressure Transducers are used to measure the cell, pore and back pressures during triaxial testing. Assemblies are supplied complete with a de-airing block, valve, 5-pin DIN plug connector and calibration certificate

**Specification**

Construction	Stainless steel
Excitation	10 V DC
Output	143 mV full range
Thread	1/4" BSP
Construction	Stainless Steel.
Excitation	10vDC.
Thread	1/4 BSP.
Construction	Stainless Steel.
Excitation	10vDC.
Thread	1/4 BSP.



## DS7.2 Undrained Triaxial Shear Strength Program for Windows 7, 32/64 bit

Code: [27-1753](#)

Product Group: [DS7](#), [DS7.2 Quick Undrained Triaxial Software](#), [Automatic Data Acquisition - Triaxial](#)

- Options for single or multi-stage testing on a sample
- Mohr circles produced for graphical analysis

Options are available for a single test on one sample, standard three-sample procedure with linking of the results, or for a multi-stage test on one sample. Load and strain are monitored through transducers. Various printouts and graphical plots are available including basic sample data, moisture content and density. The program tabulates shearing data and plots stress against strain. Mohr circles are produced for graphical analyses.



## Air Compressor

Code: 83-1730/01

Product Group: Air Compressors, Air/Water Pressure Systems - up to 1000 kPa

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***

## Specification

Dimensions (l x w x h)	483 x 457 x 864 mm
Free air delivery	2.0 cfm
Receiver capacity	50 litres
Maximum pressure	1000 kPa
Continuous working pressure	700 kPa
Electrical supply	220 – 240 V AC 1 ph 50 Hz
Water Trap	No
Weight	57 kg



## Cbr-Test 50 Machine 50kN Capacity BS and ASTM Supplied with Stabilising Bar.

Code: 24-9150/01

Product Group: CBR Load Frames

- Single speed machine (BS/EN and ASTM)
- Rapid platen adjustment
- Complete with stabilising bar
- Compact, bench-mounting design
- Options for mechanical or electronic measurement

Designed for performing laboratory CBR tests to BS 1377, EN13286-47 and ASTM D1883, this bench mounting machine comprises a twin column frame incorporating a motorised drive system. Rapid adjustment of the platen is provided, which enables daylight to be taken up quickly and also close control of application of a seating load.

## Standards

BS 1377, BS 1924, EN 13286-47, ASTM D1883, AASHTO T193

## Specification

Dimensions (l x w x h)	550 x 400 x 1220 mm
Max vertical clearance	800 mm
Horizontal clearance	255 mm
Platen diameter	133 mm
Platen travel	105 mm
Weight kg	80



## 50kN S-type Load Cell

Code: [27-1559](#)

Product Group: [Load Measurement](#), [Force measurement](#), [Electronic Instrumentation](#)


Maximum working capacity of 50 kN and excitation 10 V ac/dc with an output of 2.7 mV/V nominal.  
Aluminium alloy and stainless steel construction with IP65 environmental protection.

## Standards

EN 12697-34

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***

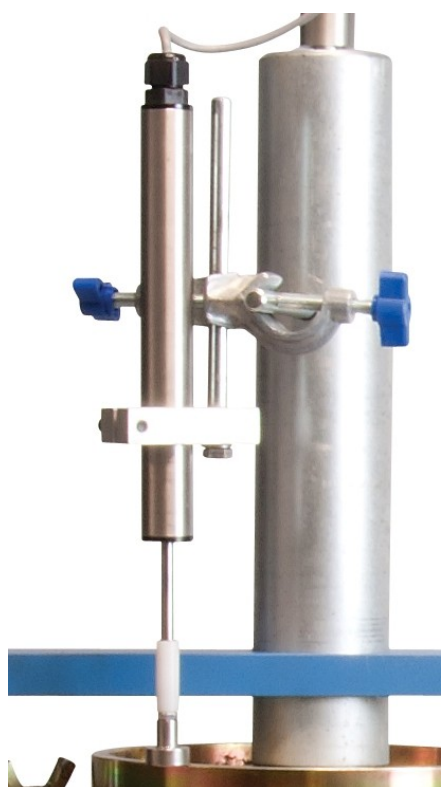

## CBR Penetration Transducer 50mm Travel Fitted with 5 Pin Din Plug.

Code: [27-1705](#)

Product Group: [Penetration Measurement](#),  
[Penetration Measurement](#)

- Ideally suited for use with GDU for accurate displacement measurements
- Models available for use in consolidation, shear, CBR and triaxial test applications
- Supplied complete with mounting hardware for specified products

Displacement Transducers are used in consolidation, shear, CBR and triaxial test applications for accurate displacement measurements. They are supplied complete with a 5-pin DIN type connector for direct connection to the GDU.

## Specification

Construction	Fully encapsulated electronics, sealed in a stainless steel case
Excitation	14 V DC
Connector	5-pin DIN type
Mounting bracket	Included as standard
Weight kg	0.45



## Penetration Piston

Code: [24-9182](#)

Product Group: [Penetration Measurement](#)

1.935 mm<sup>2</sup> (3 in<sup>2</sup>) area foot of case hardened steel.  
Designed to fit all ELE load rings.



## Bracket and Adaptor. Dual Purpose Mounting Bracket for CBR Penetration Gauges EL24-9184/EL24-9186

Code: 24-9188

Product Group: In-situ CBR, Conversion of In-situ to Laboratory CBR, Penetration Measurement

Dual purpose mounting bracket for CBR penetration dial gauges. Allows gauge to be fixed to penetration piston or load ring.

### Standards

BS 1377, BS 1924



## 2Kg Annular Surcharge Weight

Code: [24-9214](#)

Product Group: [BS EN CBR mould accessories](#)

## Standards

EN 13286-4, BS 1377-4, BS 1924-2




## 2Kg Split Surcharge Weight.

Code: [24-9216](#)

Product Group: [BS EN CBR mould accessories](#)

## Standards

EN 13286-4, BS 1377-4, BS 1924-2

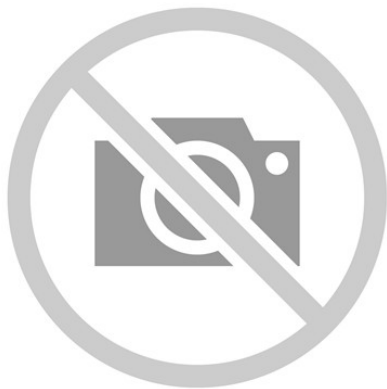

## Stopwatch

Code: [81-0521](#)

Product Group: [Watches and Clocks](#)

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## Compact Core Drill

Code: 47-5175

Product Group: Compact Core Drill Machine

This compact and portable core drilling machine is designed to cut cores up to 150 mm diameter from concrete, asphalt and similar hard construction material.

The machine comprises a vertical support column which carries the drill head/motor assembly.

An integral water swivel is built into the drill head providing a 12 mm connection to an external water supply via 12 mm flexible hose (not supplied). The motor assembly comprises a 4 hp, 2-stroke petrol engine. Speeds of 800 rpm or 1200 rpm may be selected. A ball screw mechanism enables close control over drilling pressure and rapid return when drilling is completed.

The complete assembly is supplied on a rigid metal base frame with levelling facility and is suitable for vertically down drilling applications only.

## Standards

EN 12697-32, EN 13280-4, BS 598-104

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***

Special Note: Requires a continuous clean water supply via a 12 mm flexible hose (not supplied).



## Core Barrel 100 mm

Code: [47-5565](#)

Product Group: [Core Barrels](#)

## Standards

EN 12697-32, EN 13280-4, BS 598-104

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## Core Barrel 150 mm

Code: [47-5605](#)

Product Group: [Core Barrels](#)

## Standards

EN 12697-32, EN 13280-4, BS 598-104

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## Spatula 100 mm

Code: [81-0100](#)

Product Group: [Spatulas](#)

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## Spatula 150 mm

Code: [81-0120](#)

Product Group: [Spatulas](#)

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## Spatula 200 mm

Code: [81-0140](#)

Product Group: [Spatulas, Determination of Plastic Limit](#)

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## Chattaway Spatula 125 mm

Code: [81-0180](#)

Product Group: [Spatulas](#)

### Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## Semi-Automatic Cone Penetrometer

Code: [24-0545/01](#)

Product Group: [Semi-Automatic Cone Penetrometer](#),  
[Semi-Automatic Cone Penetrometer](#)

Bench mounted apparatus to determine the liquid limit of soils to BS1377. This method is applicable to a wide range of soils. The apparatus is fitted with a 150mm diameter dial indicator for direct reading of penetration. Supplied complete with 30deg, 30mm long test cone. Manufactured from stainless steel and includes adjustable levelling feet.

Incorporates Digital Automatic controller, which releases the plunger head and ensures free falling of the penetration device during the test. The time set is displayed by a bright easy to read display.

## Standards

BS 1377, BS 1924-2, EN 1997-2

## Specification

Dial Indicator	150 mm diameter graduated in 400 x 0.1 mm divisions. Indicator incorporates a friction/gear system.
Height	Adjustable using rapid integral clamping mechanism.
Cone Release Cone	Semi-Automatic 1 x 30°, 35 mm test cone included.
Base	Cast aluminum with adjustable leveling feet.
Weight	Net 19 lbs. (8.64 kg).

## Spares/Consumables



## Penetration Test Cone

Code: [24-0544](#)



## Rod Comparator

Code: [24-0811](#)

Product Group: [Rod Comparator, Determination of Plastic Limit](#)

3mm diameter rod comparator to BS1377.

## Standards

BS 1924-2, EN 1997-2, ASTM D4318, BS 1377, AASHTO T90



## Glass Plate.

Code: [24-0430](#)

Product Group: [Casagrande Method, Determination of Plastic Limit](#)

500 mm square x 10 mm thick.

## Standards

BS 1377-2



## Consolidation Frame One Dimensional Consolidation Incremental Loading Device.

Code: 25-0402

Product Group: Consolidation Apparatus, Table Top Consolidation Apparatus

- High capacity - 8800 kPa on 50 mm diameter specimens using 11:1 beam ratio
- Triple beam ratio, 9:1, 10:1, 11:1
- Compact unit ensures maximum space saving

The ELE Oedometer is rigidly constructed to ensure minimum frame distortion. The frame is designed to load the specimen through a yoke assembly and one of three alternative beam ratios. The beam is fitted with a counterbalance weight and beam support jack. The cell platform will accept the complete range of ELE consolidation cells and is fitted with a central spigot to ensure accurate centring of the cell under the loading yoke. Dimensions without hanger 711 x 203 x 508 mm (l x w x h). Weight 22 kg.

## Standards

ASTM D2435, ASTM D4546, AASHTO T216, ASTM D3877, BS 1377-5

## Further Information

Supplied without dial gauge and weights.

## Specification

Load Capacity	48 tons/sq. ft. (5,148 kPa) on 2.5" (63 mm) diam. samples.
Loading Beam	Cast aluminum; counterbalanced; 9:1, 10:1 and 11:1 ratios.
Frame	Cast aluminum; integral beam support jack; plated steel and platform.
Dimensions	203 x 711 x 508 mm, (8" w. x 28" d. x 20" h) . excluding weight hanger.
Weight	(Net 30 lbs). 13.6 kg; Shpg. 40 lbs. (18.1 kg).

## Spares/Consumables



## Electronic Digital Indicator, 0.600"/15 mm range

Code: [88-4210](#)



## Set of Weights 100Kg Total Weight.

Code: [25-0408](#)

Product Group: [Consolidation Apparatus](#)

9 x 10 kg, 1 x 5 kg, 2 x 2 kg, 1 x 1 kg.

## Standards

ASTM D2435, ASTM D4546, AASHTO T216, ASTM D3877, BS 1377-5



## Consolidation Cell/ Oedometer Complete 75mm Diameter Sample

Code: [25-0503](#)

Product Group: [Table Top Consolidation Apparatus](#),  
[BS EN consolidation cells and accessories](#),  
[Pneumatic Consolidation Apparatus](#), [Fixed Ring Consolidation](#)

## Specification

Application	BS/EN 10:1
Specimen Dia	75 mm
Specimen area	4418 mm <sup>2</sup>
Beam ratio	9:1
Load kg	1
Stress	20 kPa
Typical max stress	3.2 MPa
Stress for 1 kg m <sup>2</sup>	20 kPa
Application	BS
Specimen Diameter	75 mm
Specimen Area	4418 mm <sup>2</sup>
Beam Ratio	10:01
Load	1 kg
Stress	20 kPa
Typical Maximum Stress	3.2 MPa
Stress for 1 kg	20 kPa

## Spares/Consumables



### 75mm Dia Upper and Lower Porous Stones for Use on EL25-0503 Series Cell.

Code: [25-0503/13](#)



### Cutting Ring 75mm Cell.

Code: [25-0506](#)



## Calibration Disc 75mm Cell

Code: [25-0509](#)

Product Group: [BS EN consolidation cells and accessories](#), [Fixed Ring Consolidation](#)

## Standards

BS 1377-5




## DS7.2 One-Dimensional Consolidation Program for Windows 7, 32/64 bit

Code: [27-1773](#)

Product Group: [DS7, DS7.2 One-Dimensional Consolidation Software](#)

DS7.1 Consolidation Software provides all basic functions needed to record and analyse consolidation test data. Options are available for monitoring settlement on a log time or square-root time basis. Printouts and graphical plots are available for all stages including Mv and Cv moisture content, voids ratio plots, and initial sample conditions.

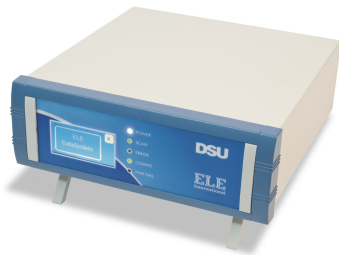

## DSU Electronic Readout and Control System 220 - 240 V AC 50/60 Hz

Code: [27-1300/01](#)

Product Group: [Data Logging with the DSU](#), [Electronic Instrumentation](#), [Data Logging with the DSU](#)

- Download the full brochure here [\[/Page/the-new-dsu\]](#)
- 4 channel automatic control and data-logging unit
- Automatic, dual-frame control
- Performs CBR, Marshall, Unconfined Compression, Direct and Residual Shear, One-Dimensional Consolidation and Unconsolidated Undrained tests
- LAN connection - software can be running anywhere on your server
- Never lose data from power fails - 2 gigabytes of non-volatile memory
- Extended warranty

The Data System Unit (DSU) is a versatile instrument designed to accommodate the general logging requirements of geotechnical and materials testing engineers. Its intelligent interface allows the user to work with a range of different sensors.

### Further Information

Become a member of the ELE International web site, add this new product to a wishlist to receive a quote! Click here [\[/Login\]](#)

Please note that this product is not yet available in the USA, we will let you know as soon as it is ready!

## Consolidation Transducer Assembly 10mm Travel Fitted with 5 Pin Din Plug.

Code: [27-1649](#)

Product Group: [Displacement Measurement](#),  
[Displacement Transducers](#), [Vertical settlement measurement](#)

Fitted with 5 pin DIN plug.



## Specification

Construction	Fully encapsulated electronics, sealed in a stainless steel case
Excitation	11 V DC
Connector	5-pin DIN type
Mounting bracket	Included as standard
Weight kg	0.45

## Spares/Consumables



### CBR Displacement Transducer

Code: [27-1706](#)



## Air Compressor

Code: [38-0320/01](#)

Product Group: [ELE Flame Photometer](#)

Supplies air at 6 litres/minute at a pressure of 1 kg/cm<sup>2</sup>, for use with 38-0200/01 Flame Photometer.

## Standards

EN 196-21, ASTM C114, TEST 17

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## Aluminium Scoop Small

Code: [81-0200](#)

Product Group: [Scoops and Shovels](#)

82 x 127 x 50 mm, cast aluminium with handle

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***



## Aluminium Scoop Large

Code: [81-0220](#)

Product Group: [Slump Test, Scoops and Shovels](#)

## Further Information

\*\*Not available for sale in the USA\*\*




## Scoop - 250 mm long

Code: [81-0222](#)

Product Group: [Scoops and Shovels](#)

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***

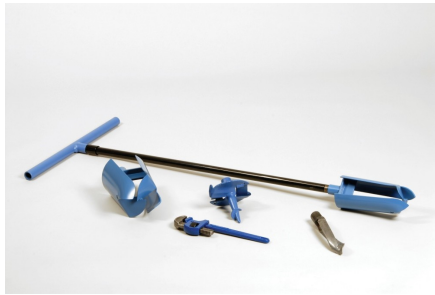


## Stillson Wrench Size 14.

Code: [23-1543](#)

Product Group: [Extension Rods, Handles and Tools](#)


Size 14, for use with 23-1541. Two required.

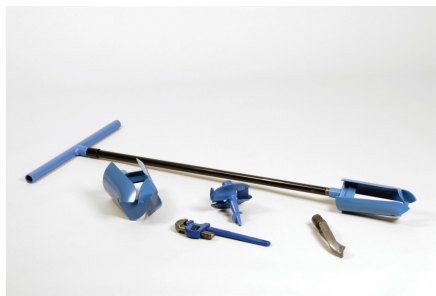

## Handle and T Piece for Use with EL23-1541.

Code: [23-1547](#)

Product Group: [Extension Rods, Handles and Tools](#)

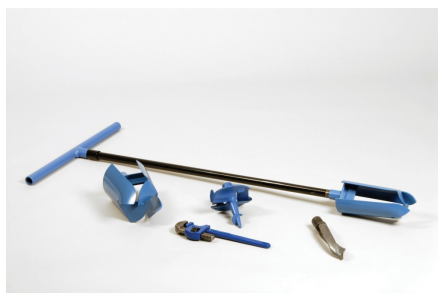

## Jarring Link for Driving Sample Tubes.

Code: [23-1587](#)

Product Group: [Extension Rods, Handles and Tools](#)

For driving sample tubes




## Spiral Auger 40mm Diameter. One Piece Model

Code: [23-1617](#)

Product Group: [Soil and Gravel Auger Heads](#)

40 mm diameter x 200 mm long with rod and T-piece attached. Overall nominal length 1250 mm.

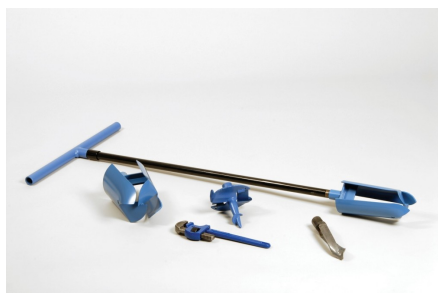

## 100mm Dia Soil Auger Head

Code: [23-1501](#)

Product Group: [Soil and Gravel Auger Heads](#)

Constructed of heavy-duty steel plates; partly interlocked at the cutting end and suitable for cohesive soils.




## 150mm Dia Soil Auger Head

Code: [23-1504](#)

Product Group: [Soil and Gravel Auger Heads](#)

Constructed of heavy-duty steel plates; partly interlocked at the cutting end and suitable for cohesive soils.

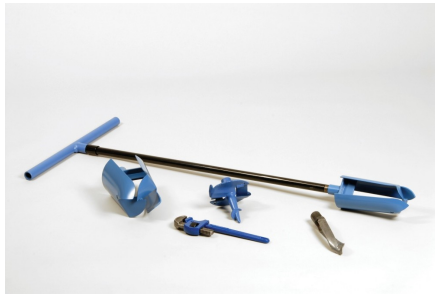


## 50mm Dia Dutch Soil Auger Head.

Code: [23-1525](#)

Product Group: [Soil and Gravel Auger Heads](#)

Constructed of heavy-duty steel plates; partly interlocked at the cutting end and suitable for fine, silty sand.

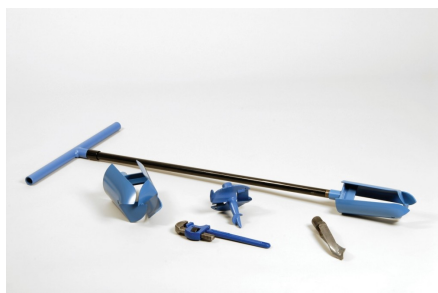


## 150mm Dia Gravel Auger Head.

Code: [23-1517](#)

Product Group: [Soil and Gravel Auger Heads](#)

Comprises one piece steel casting with a spiral point and two plates designed to close when lifting samples from the borehole; suitable for gravel and sand.

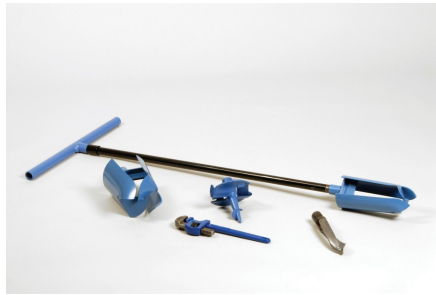

## Extension Rod 27mm Diameter 1m Long. for Use with Auger Heads

Code: [23-1541](#)

Product Group: [Extension Rods, Handles and Tools](#)

With tube connector, constructed of steel tubing  
approximately 1 metre long.



## 38mm Diameter Sample Tube 230mm Long Complete with End Caps.

Code: [23-1577](#)

Product Group: [Extension Rods, Handles and Tools](#)

Supplied without Adaptor, but with two end caps



## High Speed Stirrer Complete with Paddle Cup & Baffle. 220-240V 50/60Hz 1Ph.

Code: [24-4125/01](#)

Product Group: [Mechanical Analysis Stirrer](#)

Compact bench top stirrer used for dispersing soil samples in water. Supplied complete with mixing paddle and dispersion cup with baffle. Beaker position maintained by column retainer.

## Standards

BS 1377, ASTM D422, AASHTO T88

## Spares/Consumables




### Mixing Paddle for 24-4125 Series High Speed Stirrer

Code: [24-4125/10](#)



### Soil Dispersion Cup & Baffle.

Code: [24-4125/11](#)

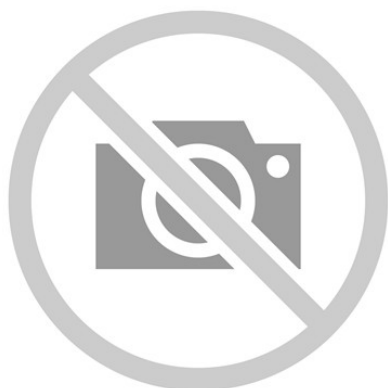

## BS Cbr Mould Body.

Code: [24-9198](#)

Product Group: [BS EN CBR mould, Accessories for BS compaction and CBR](#)

## Standards

ASTM D1883, AASHTO T193

## Specification

Mould	152 x 127 mm (inside diameter x height)
Collar	51 mm height, fits both ends of mould
Base plate	Solid, fits both ends of mould
Construction	All steel, plated
Weight kg	7.3



## BS Extension Collar

Code: [24-9200](#)

Product Group: [BS EN CBR mould accessories](#),  
[Accessories for BS compaction and CBR](#)

## Standards

EN 13286-4, BS 1377-4, BS 1924-2



## BS Solid Base or Top Plate

Code: [24-9204](#)

Product Group: [BS EN CBR mould accessories](#),  
[Accessories for BS compaction and CBR](#)

## Standards

EN 13286-4, BS 1377-4, BS 1924-2



## Speedy Moisture Tester D2 Large 0-20% Moisture Range. Supplied Less Calcium Carbide

Code: [23-7452](#)

Product Group: [Rapid method by Speedy Moisture Tester](#), [Rapid Moisture Testers](#), [Rapid method by Speedy Moisture Tester](#)

Uses a technique based on the fact that water will react with calcium carbide to form a gas and that the quantity of gas formed is directly proportional to the water present. The gas pressure is indicated on a built-in pressure gauge. The pressure gauge calibrated in percentage of moisture. Has a moisture range of 0-20% with gauge divisions every 0.2%. Holds a sample size of 20 g. Includes an electronic balance of 200 g capacity x 0.1 g readability and is supplied in plastic carrying case.

## Standards

BS 812, ASTM D4944, AASHTO T217

## Specification

Model	D2 Large
Moisture Range	0 to 20%
Gauge divisions	0.20%
Sample weight g	20
Weight complete kg	8.4

## Spares/Consumables



## Portable Electronic Balance

Code: [23-7452/12](#)



## Calcium Carbide Powder 500G.

Code: [23-7700](#)

Product Group: [Accessories for the Speedy Moisture Tester](#), [Accessories for the Speedy Moisture Tester](#)


Supplied in 500 g container.

## Standards

ASTM D4944, AASHTO T217

## Further Information

**\*\*NOT AVAILABLE FOR SALE IN THE USA\*\***

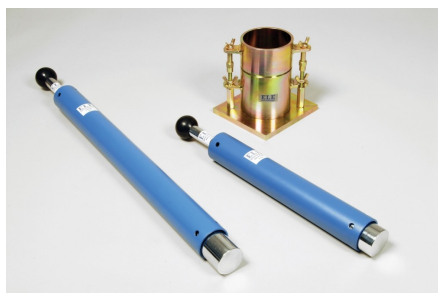

## BS Compaction Rammer 4.5Kg Wt.

Code: 24-9004

Product Group: BS/EN compaction test 4.5kg, Straightedge

50mm diameter with 450mm drop, manufactured from corrosion protected steel.

## Standards

BS 1377-4, BS 1924-2

## Specification

Rammer	50 mm dia, 4.5 kg
Drop	450 mm
Guide Sleeve	Machined steel tubing with air pressure release holes
Finish	Corrosion resistant
Weight kg	7.5