



IF IT'S WORTH BUILDING, IT'S WORTH TESTING

This wishlist was generated on 05/01/2017, and contains the following Products:

25-0402

Consolidation Frame One Dimensional Consolidation Incremental Loading Device.

25-0408

Set of Weights 100Kg Total Weight.

25-0503

Consolidation Cell/ Oedometer Complete 75mm Diameter Sample

27-1649

Consolidation Transducer Assembly 10mm Travel Fitted with 5 Pin Din Plug.

27-1773

DS7.2 One-Dimensional Consolidation Program for Windows 7, 32/64 bit



Consolidation Frame One Dimensional Consolidation Incremental Loading Device.

Code: 25-0402

Product Group: Consolidation Apparatus, Table Top Consolidation Apparatus

- High capacity - 8800 kPa on 50 mm diameter specimens using 11:1 beam ratio
- Triple beam ratio, 9:1, 10:1, 11:1
- Compact unit ensures maximum space saving

The ELE Oedometer is rigidly constructed to ensure minimum frame distortion. The frame is designed to load the specimen through a yoke assembly and one of three alternative beam ratios. The beam is fitted with a counterbalance weight and beam support jack. The cell platform will accept the complete range of ELE consolidation cells and is fitted with a central spigot to ensure accurate centring of the cell under the loading yoke. Dimensions without hanger 711 x 203 x 508 mm (l x w x h). Weight 22 kg.

Standards

ASTM D2435, ASTM D4546, AASHTO T216, ASTM D3877, BS 1377-5

Further Information

Supplied without dial gauge and weights.

Specification

Load Capacity	48 tons/sq. ft. (5,148 kPa) on 2.5" (63 mm) diam. samples.
Loading Beam	Cast aluminum; counterbalanced; 9:1, 10:1 and 11:1 ratios.
Frame	Cast aluminum; integral beam support jack; plated steel and platform.
Dimensions	203 x 711 x 508 mm, (8" w. x 28" d. x 20" h) . excluding weight hanger.
Weight	(Net 30 lbs). 13.6 kg; Shpg. 40 lbs. (18.1 kg).

Accessories



16 Ton Weight Set

Code: [25-0544](#)



2.416" Fixed Ring Consolidometer

Code: [25-0480](#)



2.5" Floating Ring Consolidometer

Code: [25-0530](#)



Consolidation Cell Complete 2.5 Inch Diameter Sample. Inc. Porous Discs and Cutting Ring.

Code: [25-0479](#)



Consolidation Cell Complete 50mm Diameter Sample.

Code: [25-0455](#)



Consolidation Cell/ Oedometer Complete 75mm Diameter Sample

Code: [25-0503](#)



Floor Mounting Stand.

Code: [25-0429](#)



Mechanical Dial Indicator - 0.4" Range

Code: [88-4070](#)



Mechanical Dial Indicator - 1.0" Range Counter Clockwise Movement

Code: [88-4120](#)



Mechanical Dial Indicator - 10 mm Range

Code: [88-4080](#)



Mechanical Dial Indicator - 25 mm Range Counter Clockwise Movement

Code: [88-4130](#)



Set of Weights 100Kg Total Weight.

Code: [25-0408](#)



Weight Set A

Code: [25-0535](#)



Weight Set B

Code: [25-0537](#)


Spares/Consumables



Electronic Digital Indicator, 0.600"/15 mm range

Code: [88-4210](#)

Alternatives

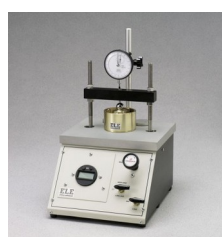

Pneumatic Consolidation Apparatus

Code: [25-0560](#)



Set of Weights 100Kg Total Weight.

Code: [25-0408](#)

Product Group: [Consolidation Apparatus](#)

9 x 10 kg, 1 x 5 kg, 2 x 2 kg, 1 x 1 kg.

Standards

ASTM D2435, ASTM D4546, AASHTO T216, ASTM D3877, BS 1377-5



Consolidation Cell/ Oedometer Complete 75mm Diameter Sample

Code: [25-0503](#)

Product Group: [Table Top Consolidation Apparatus](#),
[BS EN consolidation cells and accessories](#),
[Pneumatic Consolidation Apparatus](#), [Fixed Ring Consolidation](#)

Specification

Application	BS/EN 10:1
Specimen Dia	75 mm
Specimen area	4418 mm ²
Beam ratio	9:1
Load kg	1
Stress	20 kPa
Typical max stress	3.2 MPa
Stress for 1 kg m ²	20 kPa
Application	BS
Specimen Diameter	75 mm
Specimen Area	4418 mm ²
Beam Ratio	10:01
Load	1 kg
Stress	20 kPa
Typical Maximum Stress	3.2 MPa
Stress for 1 kg	20 kPa

Accessories



Calibration Disc 75mm Cell

Code: [25-0509](#)



Consolidation Cell Complete 2.5 Inch Diameter Sample. Inc. Porous Discs and Cutting Ring.

Code: [25-0479](#)



Consolidation Cell Complete 50mm Diameter Sample.

Code: [25-0455](#)

Spares/Consumables



75mm Dia Upper and Lower Porous Stones for Use on EL25-0503 Series Cell.

Code: [25-0503/13](#)



Cutting Ring 75mm Cell.

Code: [25-0506](#)

Alternatives



Calibration Disc 75mm Cell

Code: [25-0509](#)



Consolidation Cell Complete 2.5 Inch Diameter Sample. Inc. Porous Discs and Cutting Ring.

Code: [25-0479](#)



Consolidation Cell Complete 50mm Diameter Sample.

Code: [25-0455](#)



Consolidation Transducer Assembly 10mm Travel Fitted with 5 Pin Din Plug.

Code: [27-1649](#)

Product Group: [Displacement Measurement](#),
[Displacement Transducers](#), [Vertical settlement measurement](#)

Fitted with 5 pin DIN plug.

Specification

Construction	Fully encapsulated electronics, sealed in a stainless steel case
Excitation	11 V DC
Connector	5-pin DIN type
Mounting bracket	Included as standard
Weight kg	0.45

Accessories



Axial Strain Transducer Assembly 50mm Travel Fitted with 5 Pin Din Plug.

Code: [27-1617](#)



Horizontal Displacement Transducer Assembly 15mm Travel 5 Pin Din Plug Mounting Pillar

Code: [27-1697](#)



Vertical Displacement Transducer Assembly 15mm Travel with 5 Pin Din Plug Bracket for Shear Box

Code: [27-1689](#)

Spares/Consumables



CBR Displacement Transducer

Code: [27-1706](#)

Alternatives



Transducer Extension Cable 3.0 m

Code: [27-1717](#)



Transducer Extension Cable 4.5 m

Code: [27-1719](#)



DS7.2 One-Dimensional Consolidation Program for Windows 7, 32/64 bit

Code: [27-1773](#)

Product Group: [DS7, DS7.2 One-Dimensional Consolidation Software](#)

DS7.1 Consolidation Software provides all basic functions needed to record and analyse consolidation test data. Options are available for monitoring settlement on a log time or square-root time basis. Printouts and graphical plots are available for all stages including Mv and Cv moisture content, voids ratio plots, and initial sample conditions.