



IF IT'S WORTH BUILDING, IT'S WORTH TESTING

Contents

www.ele.com
+44 (0) 01525 249 200



This wishlist was generated on 05/06/2018, and contains the following Products:

29-3729

Pocket Penetrometer.

38-2015/01

Automatic Vicat Apparatus



Pocket Penetrometer.

Code: [29-3729](#)

Product Group: [In-situ Testing](#), [Pocket Penetrometer](#), [Plate Bearing Apparatus](#)

- Direct-reading scale in tons/sq. ft. and kg/sq. cm.
- Ground and polished stainless steel loading piston.
- Calibrated spring and penetrometer body plated for rust resistance and long life.
- Convenient belt-loop style carrying case.
- Optional Adapter Foot for testing very soft materials.

The Pocket Penetrometer was originally developed for use by field personnel in checking visual classification of soils. Data was compiled on several thousand unconfined compressive strength tests of silty clays and clayey soils against the penetrometer readings to develop the scale.

Further Information

IMPORTANT: the readings obtained from the pocket penetrometer do not replace laboratory test results due to the fact that a small area penetration test is inherently liable to give misleading results. The instrument should not be used for obtaining foundation design data.

Specification

Range	0.25 to 4.5 tons/sq. ft. (kg/sq. cm).
Scale Divisions	0.25 tons/sq. ft. (kg/sq. cm).
Load Piston	1/4" (6 mm) diam.; stainless steel.
Carrying Case	Canvas; belt-loop style.
Dimensions	3/4" diam. x 6-3/8" l. (19 x 162 mm).
Weight	Net 7 oz. (198 g).

Accessories



Adaptor Foot

Code: [29-3729/10](#)

Alternatives



C.O.E Cone Penetrometer

Code: [29-3741](#)




Proctor & Mortar Penetrometer Set

Code: [29-3935](#)



Proving Ring Penetrometer

Code: [29-3739](#)

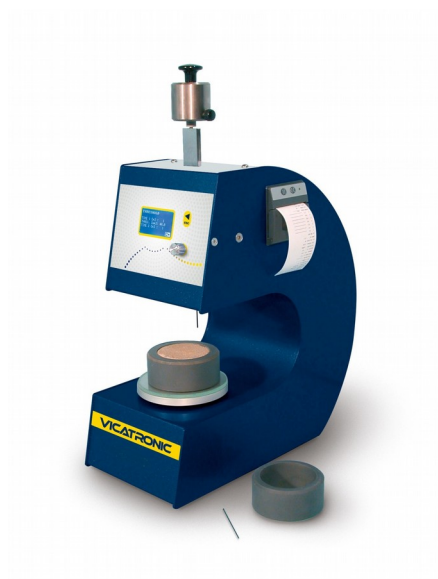

Automatic Vicat Apparatus

Code: [38-2015/01](#)

Product Group: [Automatic Vicat](#)

Complete with EN and ASTM Initial and Final needles, Consistency Plunger, Windows(R) software and RS232 cable, 1 x EN and ASTM Mould and Glass Plate. Suitable for continuous use in saturated humidity, at a controlled temperature of $20^{\circ}\text{C} \pm 1^{\circ}\text{C}$.

Standards

ASTM C187, ASTM C191

Further Information


****NOT AVAILABLE FOR SALE IN THE USA****


For 220 - 240 V AC, 50 - 60 Hz, 1 ph.

Accessories

ASTM Vicat Mould

Code: [38-2660](#)

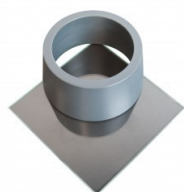

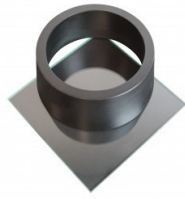

EN Vicat Mould

Code: [38-2300](#)



Mould Tank

Code: [38-2015/15](#)



Needle Cleaning Device

Code: [38-2015/12](#)



Printer Paper Rolls

Code: [38-2015/14](#)



Vicat Mould


Code: [38-2200](#)

Spares/Consumables



ASTM Initial and Final Set Needle

Code: [38-2023](#)

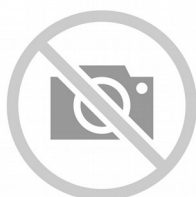

Consistency Plunger

Code: [38-2015/16](#)



EN Initial and Final Set Needle

Code: [38-2021](#)